

# **User Manual**

1-Phase PV Grid-Connected Inverter SG2.0RS-S / SG2.5RS-S / SG3.0RS-S / SG3.0RS / SG3.6RS / SG4.0RS / SG5.0RS / SG6.0RS



# **All Rights Reserved**

### **All Rights Reserved**

No part of this document can be reproduced in any form or by any means without the prior written permission of Sungrow Power Supply Co., Ltd (hereinafter "SUNGROW").

### Trademarks

SUNGROW and other SUNGROW trademarks used in this manual are owned by SUNGROW.

All other trademarks or registered trademarks mentioned in this manual are owned by their respective owners.

### Software Licenses

- It is prohibited to use data contained in firmware or software developed by SUNGROW, in part or in full, for commercial purposes by any means.
- It is prohibited to perform reverse engineering, cracking, or any other operations that compromise the original program design of the software developed by SUNGROW.

# **About This Manual**

The manual mainly contains the product information, as well as guidelines for installation, operation, and maintenance. The manual does not include complete information about the photovoltaic (PV) system. Readers can get additional information at **www.sungrowpower. com** or on the webpage of the respective component manufacturer.

## Validity

This manual is valid for the following model of low-power grid-connected PV string inverters:

- SG2.0RS-S
- SG2.5RS-S
- SG3.0RS-S
- SG3.0RS
- SG3.6RS
- SG4.0RS
- SG5.0RS
- SG6.0RS

It will be referred to as "inverter" hereinafter unless otherwise specified.

## **Target Group**

This manual is intended for professional technicians who are responsible for installation, operation, and maintenance of inverters, and users who need to check inverter parameters. The inverter must only be installed by professional technicians. The professional technician is required to meet the following requirements:

- Know electronic, electrical wiring and mechanical expertise, and be familiar with electrical and mechanical schematics.
- Have received professional training related to the installation and commissioning of electrical equipment.
- Be able to quickly respond to hazards or emergencies that occur during installation and commissioning.
- Be familiar with local standards and relevant safety regulations of electrical systems.
- Read this manual thoroughly and understand the safety instructions related to operations.

## How to Use This Manual

Please read this manual carefully before using the product and keep it properly at a place for easy access.

All contents, pictures, marks, and symbols in this manual are owned by SUNGROW. No part of this document may be reprinted by the non-internal staff of SUNGROW without written authorization.

Contents of this manual may be periodically updated or revised, and the actual product purchased shall prevail. Users can obtain the latest manual from **support.sungrowpower.com** or sales channels.

#### **Security Declaration**

For details on the product's network security vulnerability response process and vulnerability disclosure, please visit the following website: https://en.sungrowpower.com/security-vulner-ability-management.

For more information on network security, please refer to the user manual of the communication module or the Data Logger that comes with the product.

#### Symbols

This manual contains important safety instructions, which are highlighted with the following symbols, to ensure personal and property safety during usage, or to help optimize the product performance in an efficient way.

Please carefully understand the meaning of these warning symbols to better use the manual.

### DANGER

Indicates high-risk potential hazards that, if not avoided, may lead to death or serious injury.

#### A WARNING

Indicates moderate-risk potential hazards that, if not avoided, may lead to death or serious injury.

## **A**CAUTION

Indicates low-risk potential hazards that, if not avoided, may lead to minor or moderate injury.

## NOTICE

Indicates potential risks that, if not avoided, may lead to device malfunctions or financial losses.



"NOTE" indicates additional information, emphasized contents or tips that may be helpful, e.g., to help you solve problems or save time.

# Contents

All Rights Reserved	I		
About This ManualIl			
1 Safety Instructions	1		
1.1 Unpacking and Inspection	2		
1.2 Installation Safety	3		
1.3 Electrical Connection Safety	3		
1.4 Operation Safety	5		
1.5 Maintenance Safety	5		
1.6 Disposal Safety	7		
2 Product Description	8		
2.1 System Introduction	8		
2.2 Product Introduction	10		
2.3 Symbols on Product	12		
2.4 LED Panel	13		
2.5 Circuit Diagram	14		
2.6 Function Description	15		
3 Unpacking and Storage	19		
3.1 Unpacking and Inspection	19		
3.2 Inverter Storage	19		
4 Mechanical Mounting	21		
4.1 Safety During Mounting	21		
4.2 Location Requirements	22		
4.2.1 Installation Environment Requirements	23		
4.2.2 Carrier Requirements	25		
4.2.3 Angle Requirements	25		
4.2.4 Clearance Requirements	26		
4.3 Installation Tools	26		
4.4 Moving the Inverter	28		
4.5 Installing Mounting-bracket	28		
4.6 Installing the Inverter	30		
4.7 Installing Optimizer(Optional)	33		

5	Electrical Connection	35
	5.1 Safety Instructions	35
	5.2 Terminal Description	37
	5.3 Electrical Connection Overview	38
	5.4 External Protective Grounding Connection	40
	5.4.1 External Protective Grounding Requirements	41
	5.4.2 Connection Procedure	41
	5.5 AC Cable Connection	43
	5.5.1 AC Side Requirements	43
	5.5.2 Assembling the AC Connector	44
	5.5.3 Installing the AC Connector	46
	5.6 DC Cable Connection	46
	5.6.1 PV Input Configuration	48
	5.6.2 Assembling the PV Connectors	49
	5.6.3 Installing the PV Connectors	50
	5.7 WiNet-S Connection	54
	5.7.1 Ethernet Communication	55
	5.7.2 WLAN Communication	57
	5.8 Smart Meter Connection	57
	5.9 DRM Connection	60
6	Commissioning	64
	6.1 Inspection Before Commissioning	64
	6.2 Powering on the System	64
	6.3 App Preparation	65
	6.4 Creating a Plant	
	6.5 Initializing the Device	73
	6.6 Configuring the Plant	78
	6.7 Optimizer Physical Layout (Optional)	82
7	iSolarCloud App	83
	7.1 About iSolarCloud	
	7.2 Install iSolarCloud	
	7.3 User Identity	
	7.4 Device Commissioning	
Q	System Decommissioning	
0		
	8.1 Disconnecting the Inverter	
	8.2 Dismantling the Inverter	80

8.3 Disposal of Inverter	87
9 Troubleshooting and Maintenance	
9.1 Troubleshooting	
9.2 Maintenance	97
9.2.1 Maintenance Notices	97
9.2.2 Quick Shutdown	
9.2.3 Routine Maintenance	
10 Appendix	
10.1 Technical Data	
10.2 Quality Assurance	
10.3 Contact Information	

# 1 Safety Instructions

When installing, commissioning, operating, and maintaining the product, strictly observe the labels on the product and the safety requirements in the manual. Incorrect operation or work may cause:

- Injury or death to the operator or a third party.
- Damage to the product and other properties.

## A WARNING

- Do not perform any operation on the product (including but not limited to, handling, installing, powering on, or maintaining the product, performing electrical connection, and working at heights) in harsh weather conditions, such as thunder and lightning, rain, snow, and Level 6 or stronger winds. SUNGROW shall not be held liable for any damage to the device due to force majeure, such as earthquakes, floods, volcanic eruptions, mudslides, lightning strikes, fires, wars, armed conflicts, typhoons, hurricanes, tornadoes, and other extreme weathers.
- In case of fire, evacuate from the building or product area and call the fire alarm.
   Re-entry into the burning area is strictly prohibited under any circumstances.

## NOTICE

- Tighten the screws with the specified torque using tools when fastening the product and terminals. Otherwise, the product may be damaged. And the damage caused is not covered by the warranty.
- Learn how to use tools correctly before using them to avoid hurting people or damaging the device.
- Maintain the device with sufficient knowledge of this manual and use proper tools.

SUNGROW

- The safety instructions in this manual are only supplements and cannot cover all the precautions that should be followed. Perform operations considering actual onsite conditions.
- SUNGROW shall not be held liable for any damage caused by violation of general safety operation requirements, general safety standards, or any safety instruction in this manual.
- When installing, operating, and maintaining the product, comply with local laws and regulations. The safety precautions in this manual are only supplements to local laws and regulations.
- During the product transport, installation, wiring, maintenance, etc., the materials and tools prepared by users must meet the requirements of applicable local laws and regulations, safety standards, and other specifications. SUNGROW shall not be held liable for any damage to the product caused by the adoption of materials and tools that fail to meet the above-mentioned requirements.
- Operations on the product, including but not limited to, handling, installing, wiring, powering on, maintenance, and use of the product, must not be performed by unqualified personnel. SUNGROW shall not be held liable for any damage to the product resulting from operations done by unqualified personnel.
- Where the transport of the product is arranged by users, SUNGROW shall not be held liable for any damage to the product that is caused by users themselves or the third-party transport service providers designated by the users.
- SUNGROW shall not be held liable for any damage to the product caused by the negligence, intent, fault, improper operation, and other behaviors of users or third-party organizations.
- SUNGROW shall not be held liable for any damage to the product arising from reasons unrelated to SUNGROW.

# 1.1 Unpacking and Inspection

## **WARNING**

- Check all safety signs, warning labels and nameplates on devices.
- The safety signs, warning labels and nameplates must be clearly visible and cannot be removed or covered before the device is decommissioned.

### NOTICE

After receiving the product, check whether the appearance and structural parts of the device are damaged, and check whether the packing list is consistent with the actual ordered product. If there are problems with the above inspection items, do not install the device and contact your distributor first. If the problem persists, contact SUNGROW in time.

## 1.2 Installation Safety

## A DANGER

- Make sure there is no electrical connection before installation.
- Before drilling, avoid the water and electricity wiring in the wall.

### 

Improper installation may cause personal injury!

- If the product supports hoisting transport and is hoisted by hoisting tools, no one is allowed to stay under the product.
- When moving the product, be aware of the product weight and keep the balance to prevent it from tilting or falling.

#### NOTICE

Before operating the product, must check and ensure that tools to be used have been maintained regularly.

## 1.3 Electrical Connection Safety

### A DANGER

- Before electrical connections, please make sure that the inverter is not damaged, otherwise it may cause danger!
- Before electrical connections, please make sure that the inverter switch and all switches connected to the inverter are set to "OFF", otherwise electric shock may occur!

#### **DANGER**

The PV string will generate lethal high voltage when exposed to sunlight.

- Operators must wear proper personal protective equipment during electrical connections.
- Must ensure that cables are voltage-free with a measuring instrument before touching DC cables.
- Respect all safety instructions listed in relevant documents about PV strings.
- The inverter must not be connected to a PV string that requires positive or negative grounding.

#### **DANGER**

Danger to life due to a high voltage inside the inverter!

- Be sure to use special insulation tools during cable connections.
- Note and observe the warning labels on the product, and perform operations strictly following the safety instructions.
- Respect all safety instructions listed in this manual and other pertinent documents.

#### A WARNING

Damage to the product caused by incorrect wiring is not covered by the warranty.

- Electrical connection must be performed by professionals.
- All cables used in the PV generation system must be firmly attached, properly insulated, and adequately dimensioned.

## **WARNING**

- Check the positive and negative polarity of the PV strings, and connect the PV connectors to corresponding terminals only after ensuring polarity correctness.
- During the installation and operation of the inverter, please ensure that the positive or negative poles of PV strings do not short-circuit to the ground. Otherwise, an AC or DC short-circuit may occur, resulting in equipment damage. The damage caused by this is not covered by the warranty.
- Do not connect any load between the inverter and the AC circuit breaker directly connected to it, so as to prevent the switch from tripping by mistake.
- Determine the specifications of AC circuit breakers strictly in compliance with the applicable local laws and regulations and safety standards or the recommendation by SUNGROW. Otherwise, the switch may not open in time in the event of something abnormal, which may then lead to safety incidents.

#### NOTICE

Comply with the safety instructions related to PV strings and the regulations related to the local grid.

## 1.4 Operation Safety

## A DANGER

When routing cables, ensure a distance of at least 30 mm between the cables and heat-generating components or areas to protect the insulation layer of cables from aging and damage.

When the product is working:

- Do not touch the product enclosure.
- It is strictly forbidden to plug and unplug any connector on the inverter.
- Do not touch any wiring terminal of the inverter. Otherwise, electric shock may occur.
- Do not disassemble any parts of the inverter. Otherwise, electric shock may occur.
- It is strictly forbidden to touch any hot parts of the inverter (such as the heat sink). Otherwise, it may cause burns.
- Do not connect or remove any battery. Otherwise, electric shock may occur.
- Do not connect or remove any PV string or any PV module in a string. Otherwise, electric shock may occur.
- If the inverter is equipped with a DC switch, do not operate it. Otherwise, it may cause device damage or personal injury.

Do not take other actions, such as setting parameters or cutting off power, during the process of inverter firmware update, to avoid update failure.

## 1.5 Maintenance Safety

#### A DANGER

Risk of inverter damage or personal injury due to incorrect service!

- Before maintenance, disconnect the AC circuit breaker on the grid side and then the DC switch. If a fault that may cause personal injury or device damage is found before maintenance, disconnect the AC circuit breaker and wait until the night before operating the DC switch. Otherwise, a fire inside the product or an explosion may occur, causing personal injuries.
- After the inverter is powered off for 10 minutes, measure the voltage and current with professional instrument. Only when there is no voltage nor current can operators who wear protective equipment operate and maintain the inverter.
- Even if the inverter is shut down, it may still be hot and cause burns. Wear protective gloves before operating the inverter after it cools down.

#### **DANGER**

Touching the power grid or the contact points and terminals on the inverter connected to the power grid may lead to electric shock!

• The power grid side may generate voltage. Always use a standard voltmeter to ensure that there is no voltage before touching.

## 

To prevent misuse or accidents caused by unrelated personnel, post prominent warning signs or demarcate safety warning areas around the product.

## NOTICE

To avoid the risk of electric shock, do not perform any other maintenance operations beyond those described in this manual. If necessary, contact your distributor first. If the problem persists, contact SUNGROW. Otherwise, the losses caused is not covered by the warranty.

## NOTICE

- If the paint on the inverter enclosure falls or rusts, repair it in time. Otherwise, the inverter performance may be affected.
- Do not use cleaning agents to clean the inverter. Otherwise, the inverter may be damaged, and the loss caused is not covered by the warranty.
- As the inverter contains no parts that can be maintained, never open the enclosure of the inverter or replace any internal components without authorization. Otherwise, the loss caused is not covered by the warranty.
- Do not open the maintenance door in rainy or snowy weather. If it is inevitable, take proper protective measures to avoid the ingress of rainwater and snow into the maintenance compartment; otherwise, the product's operation may be affected.
- Before closing the maintenance door, check whether there is any object left inside the maintenance compartment, such as screws, tools, etc.
- It is recommended for users to use cable sheathing to protect the AC cable. If the cable sheathing is used, make sure it is positioned inside the maintenance compartment.

# 1.6 Disposal Safety

## **WARNING**

Please scrap the product in accordance with relevant local regulations and standards to avoid property losses or casualties.

# 2 Product Description

# 2.1 System Introduction

The inverter is a transformerless 1-phase PV grid-connected inverter. As an integral component in the PV power system, the inverter is designed to convert the direct current power generated from the PV modules into grid-compatible AC current and feeds the AC current to the utility grid.


## **WARNING**

- The inverter must only be operated with PV strings with class II protection in accordance with IEC 61730, application class A. It is not allowed for the positive pole or the negative pole of the PV strings to be grounded. This can cause damage to the inverter.
- Do not connect any local load between the inverter and the AC circuit breaker.

## NOTICE

The inverter applies only to the scenarios described in this manual.

The PV modules in the system must comply with the IEC 61730-1 (2016) class II standard. The intended usage of the inverter is illustrated in the following figure.

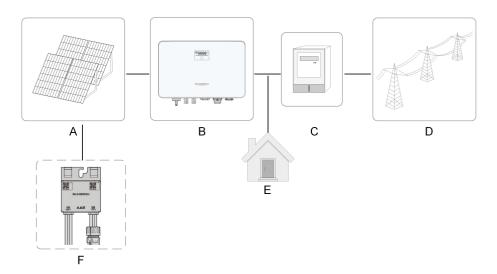



Item	Description	Note		
А	PV strings	Compatible with monocrystalline silicon, polycrystalline silicon,		
		and thin-film modules without grounding.		
BI	Inverter	SG2.0RS-S, SG2.5RS-S, SG3.0RS-S, SG3.0RS, SG3.6RS,		
		SG4.0RS, SG5.0RS, SG6.0RS.		
С	; Metering device Meter cupboard with power distribution system.			
D	Utility grid	TT,TN-C,TN-S, TN-C-S.		
Е	Loads	House loads that consume electricity.		
F	Optimizer	1		


Please refer to the optimizer user manual for details.






Please contact your local sales staff to confirm that the optimizer is available for sale in your territory. SP600S optimizer is not compatible with third-party products.

The following figure shows the common grid configurations.

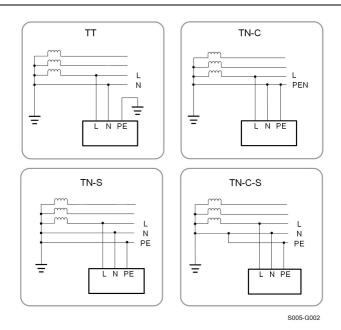


To meet the demand of users in different regions, connection to a split-phase grid system is supported for this inverter, as in the following way. Grounding detection function will not be available when the inverter is used in the split-phase grid system.

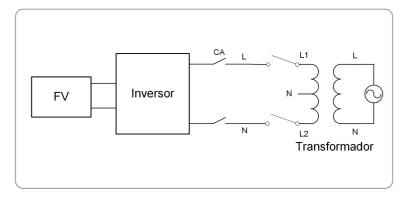

# 2.2 Product Introduction


## **Model Description**

The model description is as follows (take SG3.0RS-S as an example):

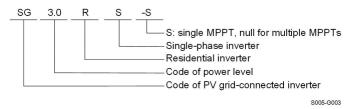

## Appearance

The following figure shows the appearance of the inverter. The image shown here is for reference only. The actual product received may differ.

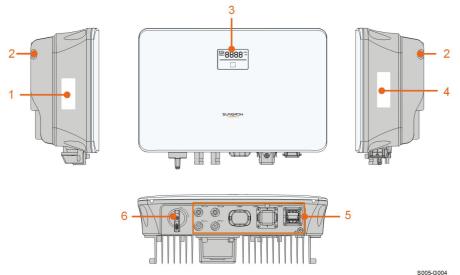

5005-0

figure 2-2 Inverter Appearance

No.	Name	Description		
1	Label	Information about <b>COM2</b> pin definition, supported DRM		
		modes, etc.		
•	Llennen	Complement to the included wall mounting bracket for hang-		
2 Hanger		ing the inverter.		
3	LED pannel	The LED screen indicates the running information and the		
		LED indicator indicates the working state of the inverter.		
4	Nameplate	To clearly identify the product, including device model, S/N,		
		important specifications, marks of certification institutions,		
		etc.		
5	Electrical connec-	DC terminals (SG6.0RS for example), AC terminal, external		
	tion area	grounding terminal and communication terminals.		
6	DC switch	To safely disconnect the DC circuit whenever necessary.		

## Dimensions

The following figure shows the dimensions of the inverter.

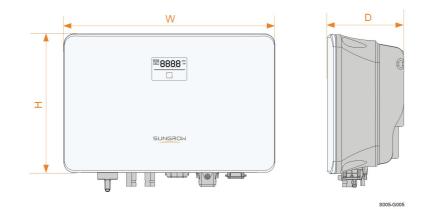


figure 2-3 Dimensions of the Inverter

Inverter Model	W (mm)	H (mm)	D (mm)
SG2.0RS-S, SG2.5RS-S, SG3.0RS-S	320	225	120
SG3.0RS, SG3.6RS, SG4.0RS, SG5.0RS, SG6.0RS	410	270	150

# 2.3 Symbols on Product

Symbol	Explanation
	Parameters on the DC side.
AC-Grid	Parameters on the AC on-grid side.
	Regulatory compliance mark.
SUD	TÜV mark of conformity.
((	CE mark of conformity.
CE	EU/EEA Importer.
UK CA	UKCA mark of conformity.
X	Do not dispose of the inverter together with household waste.
X	The inverter does not have a transformer.
$\wedge$	Disconnect the inverter from all the external power sources be-
	fore maintenance!

Symbol	Explanation
	Read the user manual before maintenance!
	Burn danger due to the hot surface that may exceed 60°C.
	Danger to life due to high voltages!
	Only qualified personnel can open and service the inverter.
	Danger to life due to high voltages!
<u>/4</u> ()	Do not touch live parts for 10 minutes after disconnection from
10min	the power sources.
	External protective grounding terminal.

\* The table shown here is for reference only. The actual product received may differ.

\* Users may also attach other warning signs as per the requirements of the local standards or installation specifications.

# 2.4 LED Panel

The LED panel with a display screen and an indicator is on the front of the inverter.



figure 2-4 LED Panel

(a) Normal state

(b) Error state

No.	Name	Description
1	E-day	Today's energy yield.
2	Pac	Current AC power.
3		To indicate the working state of the inverter.
	LED indicator	Touch it to switch the information in normal state or view multiple er-
		ror codes in error state.
4	Error code	The error code in the figure is just an example.

• In normal state, the E-day and Pac information will be displayed alternately. Also you can touch the LED indicator to switch the information.

• In error state, touch the LED indicator to view error codes.

• If there is no operation for 5 minutes, the display screen will be off. Touch the LED indicator to activate it.

LED color	State	Definition
	On	The inverter is operating normally.
Blue	Flashing	The inverter is at standby or startup state (not feeding power into the grid).
	On	A system fault has occured.
Red		
	Off	Both the AC and DC sides are powered down.
Gray		

table 2-1 State description of the LED indicator

# ▲ WARNING Voltage may still be present in AC side circuits after the indicator is off. Pay attention to the electricity safety during operating.

# 2.5 Circuit Diagram

The following figure shows the main circuit of the inverter.

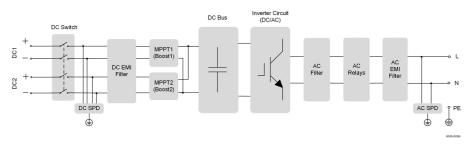


figure 2-5 Circuit Diagram (SG6.0RS for example)

- DC Switches can safely disconnect the PV input when necessary to ensure the safe operation of the inverter and the safety of personnel.
- The DC SPD provides a discharge circuit for the DC side overvoltage to prevent it from damaging the internal circuits of the inverter.

- EMI filters can filter out the electromagnetic interference inside the inverter to ensure that the inverter meets the requirements of electromagnetic compatibility standards.
- The MPPT is used to ensure a maximum power from PV arrays at different PV input conditions.
- The Inverter Circuit converts the DC power into grid-compliant AC power and feeds it into the grid.
- The AC filter filters the output AC component of high frequency to ensure that the output current meets the grid requirements.
- The AC relay isolates the AC output of the inverter from the grid, making the inverter safe from the grid in case of inverter failure or grid failure.
- The AC SPD provides a discharge circuit for the AC side overvoltage to prevent it from damaging the internal circuits of the inverter.

#### **DANGER**

If the lightning level exceeds the protection level of the product, surge protection and overvoltage protection may fail, resulting in electric shock and fatal injury!

## 2.6 Function Description

#### **Basic Function**

Conversion function

The inverter converts the DC power from the PV array to the AC power, in conformity with the grid requirements.

Data storage

The inverter logs running information, error records, etc.

Parameter configuration

The inverter provides various parameter configurations for optimal operation. Parameters can be set via the iSolarCloud App or the cloud server.

Communication interface

The inverter is equipped with two communication interfaces. The communication device can be connected to the inverter via both interfaces.

After communication connection is established, users can view inverter information, operational data and can set inverter parameters through the iSolarCloud.



It is recommended to use the communication module from SUNGROW. Using a device from other companies may lead to communication failure or other unexpected damage.



### Protection Function

Several protective functions are integrated in the inverter, including short circuit protection, grounding insulation resistance monitoring, residual current protection, grid monitoring, DC overvoltage/overcurrent protection, etc.

## DRM ("AU"/"NZ")

The DRM function is only applicable to a single inverter.

The inverter provides terminals for connecting to a Demand Response Enabling Device (DRED). After the connection, the DRED asserts demand response modes (DRMs). The inverter detects and initiates a response to all supported demand response modes listed in the following table.

table 2-2 Demand Response Mode Explanation

Mode	Explanation
DRM0	The inverter is in the state of shutdown.

### **Feed-in Limitation**

Set the feed-in limitation value via iSolarCloud App. When the smart energy meter detects that the export power is greater than the limit value, the inverter will reduce the output power within the specified range.

### **PID Zero**

The PID Zero function is applicable for both PV and DC-coupled PV plus storage systems. It can suppress PID during the day and intelligently repair PV panels damage caused by PID at night, by relieving or alleviating PV array voltage bias to PV-.

The traditional inverter needs boost circuit to extend the efficient generation time during the day, and break the symmetry of the PV array to the ground voltage, making it closer to the negative electrode. In addition, if the traditional inverter runs at night, the PV array to ground voltage is always limited to the lowest voltage point of the system, which increases the risk of PID.

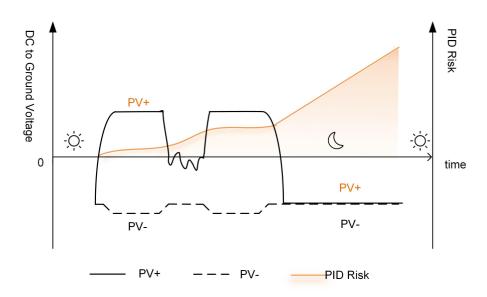


figure 2-6 PID Risk of Traditional Inverters

The following figure is the PID risk of the inverter equipped with PID Zero, it prevents the PV array voltage from approaching PV-, reduces the risk of PID during daily operation and repairs PV panels caused by PID at night. Details can be found in the *PID Zero White Paper*, which can be obtained on www.sungrowpower.com or from your distributor.

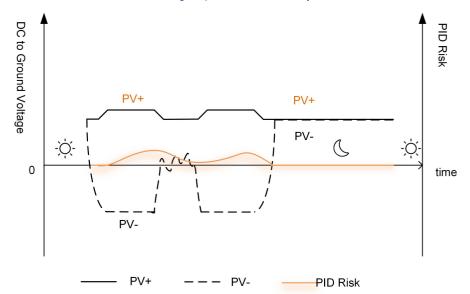


figure 2-7 PID Risk of Inverters Equipped with PID Zero

## A DANGER

Keep the DC switch "ON" in the PID Zero process. During the process, there is voltage hazard between inverter / PV panels live conductors and ground. Do not touch any of them.

SUNGROW



When the PID Zero function is enabled, there will be a power consumption of less than 30 W in the PID Zero process.

#### AFCI Function(Optional)

AFCI activation

This function can be enabled to detect whether arc occurs in the DC circuit of the inverter.

AFCI self-test

This function is intended to detect whether the AFCI function of the inverter is normal.



The arc detection function meets the standard requirements, please test under the working conditions as required by the standard.

#### **Earth Fault Alarm**

The device gives an alarm if there is a grounding fault. If the AC side is poorly grounded or not grounded, the buzzer rings, and the LED indicator turns red.

#### **Optimizer Functions**

Module-level MPPT

Increase the power generation of the PV system by continuously tracking the maximum power point of the PV module.

Module-level shutdown

Quickly reduce module voltage.

Module-level monitoring

The optimizer can monitor the performance of modules.

• Module-level IV curve diagnosis

The optimizer can scan the module IV curve and judge whether a module fault occurs.

# 3 Unpacking and Storage

# 3.1 Unpacking and Inspection

The product is thoroughly tested and strictly inspected before delivery. Nonetheless, damage may still occur during shipping. For this reason, please conduct a thorough inspection after receiving the product.

- Check the packing case for any visible damage.
- · Check the scope of delivery for completeness according to the packing list.
- · Check the inner contents for damage after unpacking.

Contact SUNGROW or the transport company in case of any damage or incompleteness, and provide photos to facilitate services.

Do not dispose of the original packing case. It is recommended to store the device in the original packing case when the product is decommissioned.

### NOTICE

- After receiving the product, check whether the appearance and structural parts of the device are damaged, and check whether the packing list is consistent with the actual ordered product. If there are problems with the above inspection items, do not install the device and contact your distributor first. If the problem persists, contact SUNGROW in time.
- If any tool is used for unpacking, be careful not to damage the product.

## 3.2 Inverter Storage

Proper storage is required if the inverter is not installed immediately.

- Store the inverter in the original packing case with the desiccant inside.
- The storage temperature must be always between -30°C and +70°C, and the storage relative humidity must be always between 0 and 95 %, non-condensing.
- In case of stacking storage, the number of stacking layers should never exceed the limit marked on the outer side of the packing case.
- The packing case should be upright.
- If the inverter needs to be transported again, pack it strictly before loading and transporting it.
- Do not store the inverter in places susceptible to direct sunlight, rain, and strong electric field.



- Do not place the inverter in places with items that may affect or damage the inverter.
- Store the inverter in a clean and dry place to prevent dust and water vapor from eroding.
- Do not store the inverter in places with corrosive substances or susceptible to rodents and insects.
- Carry out periodic inspections. Inspection shall be conducted at least once every six months. If any insect or rodent bites are found, replace the packaging materials in time.
- If the inverter has been stored for more than a year, inspection and testing by professionals are required before it can be put into operation.

## NOTICE

Please store the inverter according to the storage requirements. Product damage caused by failure to meet the storage requirements is not covered by the warranty.

# 4 Mechanical Mounting

### A WARNING

Respect all local standards and requirements during mechanical installation.

## 4.1 Safety During Mounting

### **DANGER**

Make sure there is no electrical connection before installation. Before drilling, avoid the water and electricity wiring in the wall.

## \Lambda WARNING

For specific requirements for the installation environment, see "4.2.1 Installation Environment Requirements". In case the environment where the product is installed does not meet the requirements, SUNGROW shall not be held liable for any property damage arising therefrom.

### **CAUTION**

Improper handling may cause personal injury!

- When moving the product, be aware of its weight and keep the balance to prevent it from tilting or falling.
- · Wear proper protective equipment before performing operations on the product.
- The bottom terminals and interfaces of the product cannot directly contact the ground or other supports. The product cannot be directly placed on the ground.

#### NOTICE

During installation, ensure that no device in the system causes it hard for the DC switch and the AC circuit breaker to act or hinders maintenance personnel from operating.


If drilling is required during installation:

- Wear goggles and protective gloves when drilling holes.
- Make sure to avoid the water and electricity wiring in the wall before drilling.
- Protect the product from shavings and dust.

## 4.2 Location Requirements


To a large extent, a proper installation location ensures safe operation, service life, and performance of the inverter.

- The inverter with protection rating IP65 can be installed both indoors and outdoors.
- The inverter should be installed at a height that allows easy viewing of the LED indicator panel, as well as easy electrical connection, operation and maintenance.

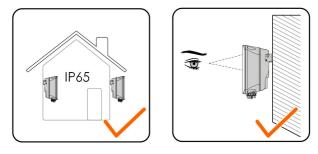


S005-I001

## 4.2.1 Installation Environment Requirements

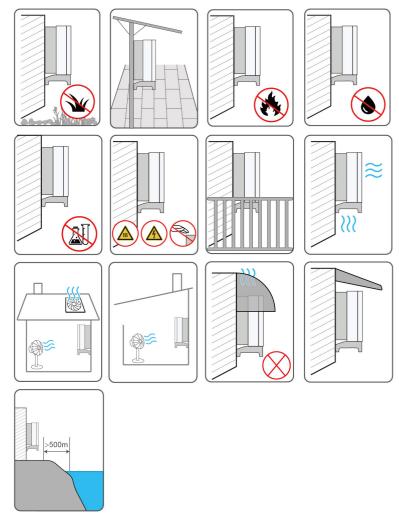

- If the inverter is installed in a place with lush vegetation, weed on a regular basis. In addition, the ground beneath the inverter needs to undergo certain treatment, such as laying cement or gravel, etc. (an area of 3m×2.5m is recommended).
- Do not install the inverter in an environment with flammables, explosives, or smoke.
- Do not install the inverter in places prone to water leak, e.g., under the air-conditioner vent, the air vent, or the cable outlet window of the machine room, so as to prevent device damage or short circuit caused by intrusion of water.
- Do no install the inverter in a place with corrosives such as corrosive gas and organic solvent, etc.
- When the inverter is running, its surface may carry high voltages or get very hot. Do not touch it; otherwise, it may lead to burns or electric shocks.
- Do not install the inverter in a place that is easy to reach for people.

- The installation site must have solid ground, free of rubber-like soils (which cannot be effectively compacted) or weak soils, and should not be prone to subsidence. Also, avoid low-lying areas where water or snow may easily accumulate. Ensure the site is located above the highest recorded water level in the area.
- Do not install the inverter in a position that could be flooded.
- To prevent vegetation or water on the ground from impacting inverter operation, if the space above meets the designated requirements, elevate the inverter to an appropriate height.
- Install the inverter in a place with shelter, so as to prevent it from getting impacted by direct sunlight and severe weather (e.g. snow, rain, and lightning). The inverter will derate in high temperatures for self-protection. If installed in a place directly exposed to sunlight, as the temperature rises, the inverter may witness power reduction.
- Good heat dissipation is very important to the inverter. Please install the inverter in a ventilated environment.
- If the inverter needs to be installed in a closed or semi-closed environment, please install
  additional heat dissipation or ventilation devices. Furthermore, while the inverter is operating, ensure the indoor ambient temperature does not exceed the outdoor ambient temperature. A semi-closed environment refers to a special space where natural ventilation
  is limited and gas or heat may easily accumulate, although it is not fully enclosed on all
  six sides.
- Please consult SUNGROW before installing inverters outdoors in areas prone to salt damage, which mainly are coastal areas within 500 meters of the coast. The sedimentation amount of salt spray is correlated to the characteristics of the seawater, sea winds, precipitation, air humidity, topography, and forest coverage in the adjacent sea areas, and there are substantial differences between different coastal areas.
- Do not install the inverter in an environment contaminated with chemicals such as halogen and sulfide.
- Do not install the inverter in an environment with vibration and strong electromagnetic field. Strong-magnetic-field environments refer to places where magnetic field strength measures over 30 A/m.
- In dusty environments such as places full of dust, smoke, or floc, particles may cling to the device's air outlet or heat sink, thus impacting its heat dissipation performance or even getting it damaged. Therefore, do not install the inverter in dusty environments. If the inverter has to be installed in such environments, please clean its fans and heat sink on a regular basis to ensure a good heat dissipation performance.
- To avoid disturbing residents in living areas with noise generated during the operation of the device, do not install the inverter in noise-sensitive areas such as bedrooms. It is preferable to choose an open location that is far away from the living and resting areas.
- The average temperature approximately 1 m around the inverter should be taken as its ambient operating temperature. The temperature and humidity should meet the requirements below:

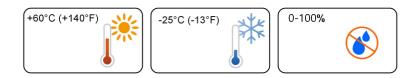


## 4.2.2 Carrier Requirements

The mounting structure where the inverter is installed must comply with local/national standards and guidelines. Ensure that the installation surface is solid enough to bear four times the weight of the inverter and is suitable for the dimensions of the inverter (e.g. cement walls, plasterboard walls, etc.).

Do not install the inverter on a carrier that may vibrate in resonance, so as to avoid making bigger noise.


Installation on combustible building materials is strictly prohibited. Suitable mounting surfaces include:

Non-combustible wall surfaces: Concrete, fire-resistant gypsum board, brick wall, etc. Noncombustible roof structures: Color-Coated corrugated steel roofing sheets, precast concrete slabs, fiber-reinforced cement boards, etc.

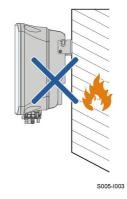

### 4.2.3 Angle Requirements


Install the inverter vertically. Never install the inverter horizontally, or at forward/backward tilted, side tilted, or upside down.

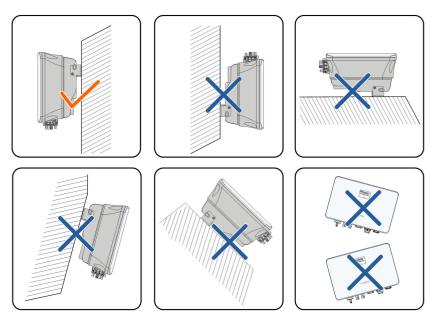

S005-1004

## 4.2.4 Clearance Requirements

Reserve enough clearance around the inverter to ensure sufficient space for heat dissipation.

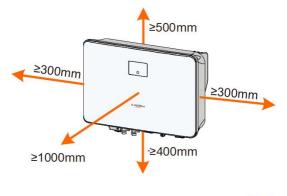

S005-1005

Install the inverter at an appropriate height for ease of viewing the screen and LED indicator and operating switch(es).

## 4.3 Installation Tools

Installation tools include but are not limited to the following recommended ones. If necessary, use other auxiliary tools on site.

#### table 4-1 Tool specification



Heat gun	Open-end wrench (33 mm, 35 mm)	Connector wrench	Multimeter (≥ 600 Vdc)
	(55 mm, 55 mm)		vuc)

Rubber mallet Ha

Hammer drill (φ10)

# 4.4 Moving the Inverter

Before installation, remove the inverter from the packing case and move it to the installation site. Follow the instructions below as you move the inverter:

- Always be aware of the weight of the inverter.
- Lift the inverter using the handles positioned on both sides of the inverter.
- Move the inverter by one or two people or by using a proper transport tool.
- Do not release the equipment unless it has been firmly secured.

### **A**CAUTION

Improper handling may cause personal injury!

- Arrange an appropriate number of personnel to carry the inverter according to its weight, and installation personnel should wear protective equipment such as anti-impact shoes and gloves.
- Attention must be paid to the center of gravity of the inverter to avoid tilting during handling.
- Placing the inverter directly on a hard ground may cause damage to its metal enclosure. Protective materials such as sponge pad or foam cushion should be placed underneath the inverter.
- Move the inverter by holding the handles on it. Do not move the inverter by holding the terminals.

# 4.5 Installing Mounting-bracket

The inverter can be installed on a bracket, a wall, and a pole by means of mounting-bracket. Dimensions of the assembled mounting-bracket are as follows. SG2.0RS-S/SG2.5RS-S/SG3.0RS-S

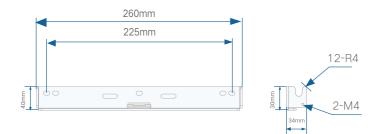


figure 4-1 Dimensions of Mounting-bracket

#### SG3.0RS/SG3.6RS/SG4.0RS/SG5.0RS/SG6.0RS



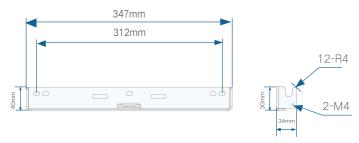


figure 4-2 Dimensions of Mounting-bracket

Reserve enough space when installing the mounting-bracket to meet the installation space requirements of the inverter.

SG2.0RS-S/SG2.5RS-S/SG3.0RS-S

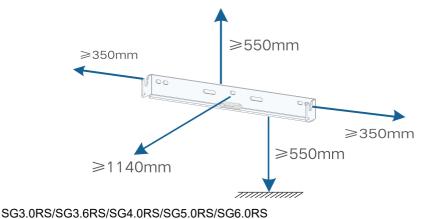

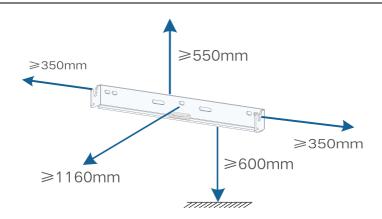

## 4.6 Installing the Inverter

Inverter is installed on the wall by means of wall-mounting bracket and the expansion plug sets.

The expansion plug set shown below is recommended for the installation.





(1) Self-tapping (2) Expansion tube screw M6

(3) Fender washer


(4) Spring washer

**Step 1** Place the wall-mounting bracket to a proper position on the wall. Mark the positions and drill the holes.

#### NOTICE

Observe the level on the bracket and adjust until the bubble is in the middle position.


The depth of the holes should be about 70 mm.

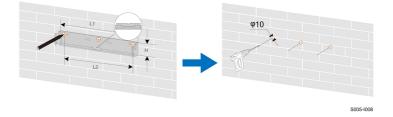

\* The image shown here is for reference only. The actual product received may differ.


Inverter Model	L1 (mm)	L2 (mm)	H (mm)
SG2.0RS-S, SG2.5RS-S, SG3.0RS-S	260	225	40
SG3.0RS, SG3.6RS, SG4.0RS, 347		312	40
SG5.0RS, SG6.0RS	011	012	10

**Step 2** Place the expansion tubes into the holes. Then secure the wall-mounting bracket to the wall firmly with the expansion bolt sets.

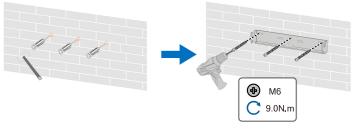

S005-1009


**Step 3** Lift the inverter and slide it down along the wall-mounting bracket to make sure they match perfectly. Use two screw sets to lock both left and right sides.

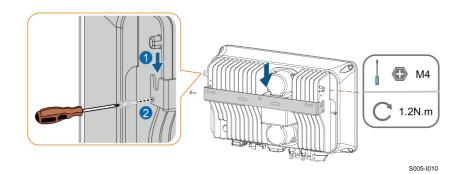

- - End


# 4.7 Installing Optimizer(Optional)

**Step 1** As shown in the figure below, clamp the optimizer parallel to the back of the PV module by clips.

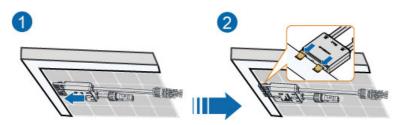


#### NOTICE


- Optimizer is only sold in certain countries and regions. For details, please consult your local company's sales.
- Please ensure that the optimizer is installed facing the back of the module. Otherwise, the clip may get damaged.

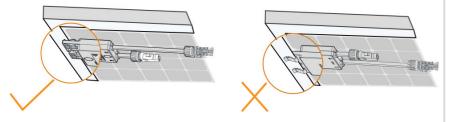

 Do not forcibly bend the clips when installing the optimizer by clips. Otherwise, the clip may be damaged.

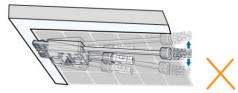

• Do not clamp the optimizer into holes in the module frame during installation. Otherwise, the optimizer cannot be removed or the clips may be damaged.

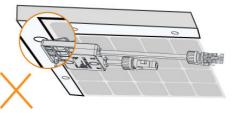

- It is recommended to install optimizers on the same side of modules.
- Do not clamp and remove the optimizer multiple times. Otherwise, the clip may become loose, affecting normal use.

- - End

# 5 Electrical Connection

## 5.1 Safety Instructions

#### **DANGER**

The PV string will generate lethal high voltage when exposed to sunlight.

- Operators must wear proper personal protective equipment during electrical connections.
- Must ensure that cables are voltage-free with a measuring instrument before touching DC cables.
- Respect all safety instructions listed in relevant documents about PV strings.

#### **DANGER**

- Before electrical connections, please make sure that the inverter switch and all switches connected to the inverter are set to "OFF", otherwise electric shock may occur!
- Ensure that the inverter is undamaged and all cables are voltage free before performing electrical work.
- Do not close the AC circuit breaker until the electrical connection is completed.

#### A WARNING

Do not damage the ground conductor. Do not operate the product in the absence of a properly installed ground conductor. Otherwise, it may cause personal injury or product damage.

Please use measuring devices with an appropriate range. Overvoltage can damage the measuring device and cause personal injury.

Damage to the product caused by incorrect wiring is not covered by the warranty.

- Electrical connection must be performed by professionals.
- Operators must wear proper personal protective equipment during electrical connections.
- All cables used in the PV generation system must be firmly attached, properly insulated, and adequately dimensioned. Cables used shall comply with the requirements of local laws and regulations.
- The factors that affect cable selection include rated current, cable type, routing mode, ambient temperature, and maximum expected line loss.

#### NOTICE

All electrical connections must comply with local and national/regional electrical standards.

- Cables used by the user shall comply with the requirements of local laws and regulations.
- Only with the permission of the national/regional grid department, the inverter can be connected to the grid.

#### NOTICE

- Install the external protective grounding cable first when performing electrical connection and remove the external protective grounding cable last when removing the inverter.
- Keep the AC output cable and the DC input cable close to each other during electrical connection.
- Comply with the safety instructions related to PV strings and the regulations related to the utility grid.

#### NOTICE

- After being crimped, the OT terminal must wrap the wires completely, and the wires must contact the OT terminal closely.
- When using a heat gun, protect the device from being scorched.
- Keep the PV+ cable and PV- cable close to each other when connecting DC input cables.
- Before connecting a power cable (such as the AC cable, the DC cable, etc.), confirm that the label and identifier on the power cable are correct.
- When laying out communication cables, separate them from power cables and keep them away from strong interference sources to prevent communication interruption.
- All vacant terminals must be covered with waterproof covers to prevent affecting the protection performance.
- Ensure that AC output cables are firmly connected. Failing to do so may cause inverter malfunction or damage to its AC connectors.
- When the wiring is completed, seal the gap at the cable inlet and outlet holes with fireproof/waterproof materials such as fireproof mud to prevent foreign matter or moisture from entering and affecting the long-term normal operation of the inverter.

0

The cable colors in figures in this manual are for reference only. Please select cables according to local cable standards.

# 5.2 Terminal Description

All electrical terminals are located at the bottom side of the inverter.

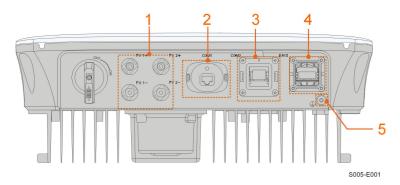


figure 5-1 Terminals (SG3.0RS for example)

\* The image shown here is for reference only. The actual product received may differ.

			Decisive Volt-
No.	Name	Description	age
			Classification
	PV1+, PV1–, PV2+,	MC4 terminals for PV input.	
1	PV2–	The terminal number depends on in-	DVC-C
	1 12-	verter model.	
		Communication accessory port to be	
2	COM1	connected to WiNet-S communica-	DVC-A
		tion module.	
		Communication connection for	
3	COM2	RS485, DRM and smart energy	DVC-A
		meter.	
4	GRID	AC terminal to connect to the grid.	DVC-C
5		External grounding terminal.	Not applicable

table 5-1 Terminal Description

The pin definition of COM2 terminal is shown in the following label.

RS485	Meter	DRM	RSD
A1	A2	R	RSD-1
B1	B2	С	RSD-2


figure 5-2 Label of COM2 Terminal

table 5-2 Label Description of COM2 Terminal


Label		Description
RS485	A1, B1	Reserved
Meter	A2, B2	For the smart energy meter
DRM	R, C	For external Demand Response Enabling Device ("AU"/"NZ")
RSD	RSD-1, RSD-2	Reserved

# 5.3 Electrical Connection Overview

The electrical connection should be realized as follows:

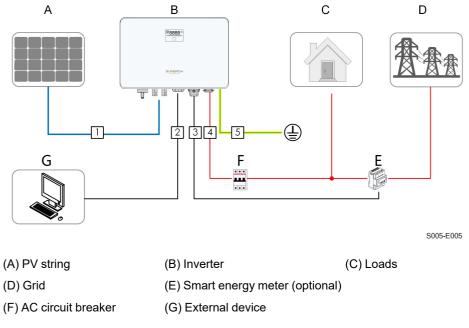

The electrical connection should be realized as follows(Includes optimizer):

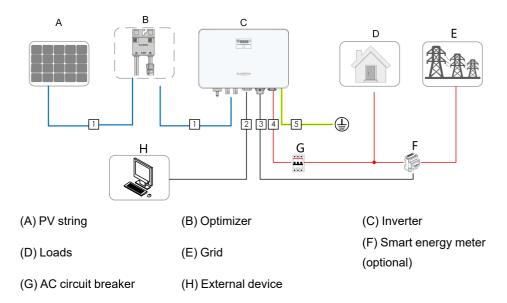

#### table 5-3 Cable Requirements

No.	Cable	Туре	Cable Diameter	Wire Conductor
				Cross-section
		Single or multi-core		
1	DC cable	copper wire comply-	6 mm–9 mm	4 mm <sup>2</sup> –6 mm <sup>2</sup>
1	Do cable	ing with 600 V and	011111-311111	+ mm =0 mm
		20 A standard		
2		CAT 5E outdoor		8 * (0.08–0.2)
	Ethernet cable <sup>(3)</sup>	shielded network	4.8 mm–6 mm	8 (0.00–0.2) mm <sup>2</sup>
		cable		1111114
3	Meter RS485 ca- ble <sup>(1)</sup>	Shielded twisted pair	4.8 mm–6 mm	2 * (0.5–1.0) mm <sup>2</sup>
4 AC ashla	AC cable <sup>(2)</sup>	Outdoor 3-core cop-	10 mm–21 mm	<b>1</b>
4	AC Cable (2)	per wire cable		4 mm <sup>2</sup> –6 mm <sup>2</sup>
F	External Ground-	Outdoor single-core	4	4
5	ing cable	copper wire cable	4 mm –8 mm	4 mm <sup>2</sup> –6 mm <sup>2</sup>

(1) The cable requirements for **COM2** terminal connection are the same.

(2) All the AC wires should be equipped with correctly colored cables for distinguishing. Please refer to related standards about the wiring color.

(3) To meet shielding and anti-interference requirements:

- Shielded Ethernet cables are mandatory. It is recommended to use CAT 5E or CAT 6 shielded cables.
- Use Ethernet cables with magnet cores at both ends, and in some cases, add magnet cores in the middle.

(4) The factors that affect cable selection include rated current, cable type, routing mode, ambient temperature, and maximum expected line loss.



It is recommended to use heavy duty conduits when run cables through Cavity walls, or lay out cables with corresponding conduits. (For "AU" and "NZ")

# 5.4 External Protective Grounding Connection

#### **DANGER**

- There are large currents during the inverter's operation. If the inverter is powered on and put into operation without being grounded, it may lead to electric shock hazards or failures of major protective functions such as surge protection. Therefore, before powering on the inverter, make sure it has been reliably grounded; otherwise, damages caused therefrom will not be covered by warranty.
- When performing electrical connections of the inverter, give the highest priority to grounding. Be sure to carry out the grounding connection first.

#### A WARNING

- Since the inverter is not equipped with a transformer, neither the negative electrode nor the positive electrode of the PV string can be grounded. Otherwise, the inverter will not operate normally.
- Connect the grounding terminal to the external protective grounding point before AC cable connection, PV string connection, and communication cable connection.
- The external protective grounding point provides a reliable ground connection. Do not use an improper grounding conductor for grounding, Otherwise, it may cause product damage or personal injury.
- Depending on Local Rules, please also ground the PV panel subconstruction to the same common grounding point (PE Bar) in addition to local lightning protection rules.

#### **WARNING**

The external protective grounding terminal must meet at least one of the following requirements.

- The cross-sectional area of the grounding cable is not less than 10 mm<sup>2</sup> for copper wire or 16 mm<sup>2</sup> for aluminum wire. It is recommended that both the external protective grounding terminal and the AC side grounding terminal be reliably grounded.
- If the cross-sectional area of the grounding cable is less than 10 mm<sup>2</sup> for copper wire or 16 mm<sup>2</sup> for aluminum wire, ensure that both the external protective grounding terminal and the AC side grounding terminal are reliably grounded.

The grounding connection can be made by other means if they are in accordance with the local standards and regulations, and SUNGROW shall not be held liable for the possible consequences.

#### 5.4.1 External Protective Grounding Requirements

All non-current carrying metal parts and device enclosures in the PV power system should be grounded, for example, brackets of PV modules and inverter enclosure.

When there is only one inverter in the PV system, connect the external protective grounding cable to a nearby grounding point.


When there are multiple inverters in the PV system, connect the external protective grounding terminals of all inverters and the grounding points of the PV module brackets to ensure equipotential connections to ground cables (according to the onsite conditions).

#### 5.4.2 Connection Procedure


External grounding cable and OT/DT terminal are prepared by customers.


SUNGROW

Step 1 Prepare the cable and OT/DT terminal.

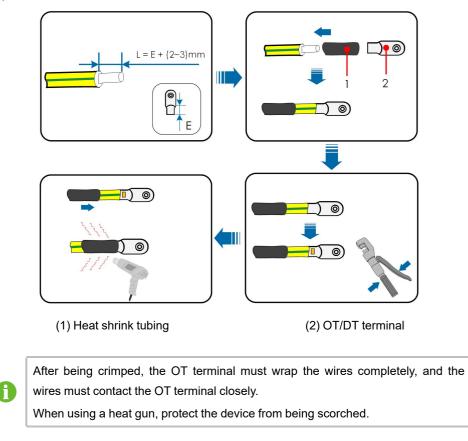

Step 2 Remove the screw on the grounding terminal and fasten the cable with a screwdriver.

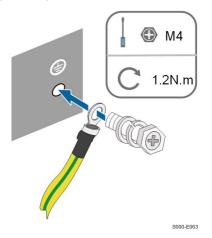

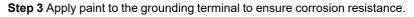

- - End

# 5.5 AC Cable Connection

#### 5.5.1 AC Side Requirements

đ

Only with the permission of the local grid department, the inverter can be connected to the grid.

Before connecting the inverter to the grid, ensure the grid voltage and frequency comply with requirements, for which, refer to **"Technical Data"**. Otherwise, contact the electric power company for help.

#### **AC Circuit Breaker**

An independent two-pole circuit breaker must be installed on the output side of the inverter to ensure safe disconnection from the grid. The recommended specifications are as follows.

#### NOTICE

In Australia, single-pole circuit breakers should be used.

Inverter Model	Recommended Specification
SG2.0RS-S/SG2.5RS-S/SG3.0RS-S	25 A
SG3.0RS/SG3.6RS/SG4.0RS/SG5.0RS	32 A
SG6.0RS	40 A

#### NOTICE

Testing to AS/NNZS 4777.2:2020 Section for multiple phase combinations has not been conducted.

#### \Lambda WARNING

AC circuit breakers should be installed on the output side of the inverter and the grid side to ensure safe disconnection from the grid.

- Determine whether an AC circuit breaker with greater overcurrent capacity is required based on actual conditions.
- Do not connect any local load between the inverter and the AC circuit breaker.
- Multiple inverters cannot share one AC circuit breaker.

#### **Residual Current Monitoring Device**

With an integrated universal current-sensitive residual current monitoring unit included, the inverter will disconnect immediately from the mains power once a fault current with a value exceeding the limit is detected.




However if an external residual current device (RCD) (type A is recommended) is mandatory, the switch must be triggered at a residual current of 300 mA (recommended). RCD of other specifications can also be used according to local standard.

In Australia, a RCD is not required according to the local standard AS3000-2018 when either of the following installation methods is adopted if the PV array capacitance to ground is large (such as a tin roof):


- Use heavy duty conduits (such as metal bushing) when run PV and AC cables through Cavity walls.
- Route the PV and AC cables through pipes (PVC or metal tubing), lay the cables and install them.

#### 5.5.2 Assembling the AC Connector


Step 1 Unscrew the swivel nut of the AC connector.

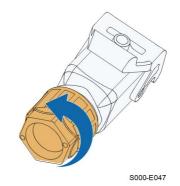


**Step 2** Thread the AC cable of appropriate length through the swivel nut, the sealing ring and the housing.

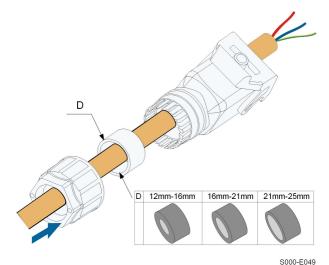

Step 3 Remove the cable jacket by less than 45 mm, and strip the wire insulation by 12 mm–16 mm.

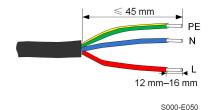

**Step 4** Open the clamp on the spring-loaded terminal and fully insert the wires into the corresponding holes. Then close the clamp and push the terminal plug into the housing until there is an audible click.

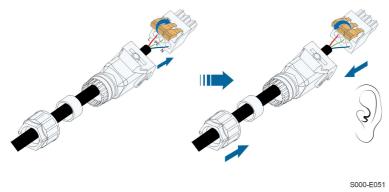

#### NOTICE

Observe the plug assignment.

- Do not connect the L line to the "PE" terminal or the PE wire to the "N" terminal. Otherwise, unrecoverable damage to the inverter may follow.
- Do not connect the L line and the N line in reverse, otherwise the inverter may not operate normally.
- **Step 5** Ensure that the wires are securely in place by slightly pulling them. Tighten the swivel nut to the housing.




- - End

#### 5.5.3 Installing the AC Connector

ADANGER
High voltage may be present in inverter!
Ensure all cables are voltage-free before electrical connection.
Do not connect the AC circuit breaker until all inverter electrical connections are completed.

- **Step 1** Disconnect the AC circuit breaker and secure it against reconnection.
- **Step 2** Lift the locking part upwards and insert the AC connector into the **GRID** terminal on the bottom side of the inverter. Then press the locking part and lock it with the screw.

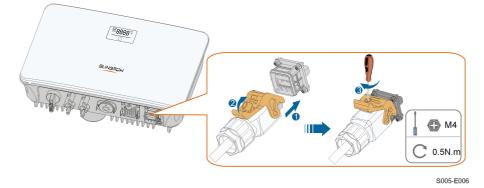

- **Step 3** Connect the PE wire to ground and the phase lines and the "N" line to AC circuit breaker. Then Connect the AC circuit breaker to electric board.
- Step 4 Make sure all wires are firmly installed via the right torque tool or dragging the cables slightly.

- - End

### 5.6 DC Cable Connection

#### **DANGER**

The PV string will generate lethal high voltage when exposed to sunlight.

Respect all safety instructions listed in relevant documents about PV strings.

#### WARNING

- Make sure the PV array is well insulated to ground before connecting it to the inverter.
- Make sure the maximum DC voltage and the maximum short circuit current of any string never exceed inverter permitted values specified in "Technical Data".
- Check the positive and negative polarity of the PV strings, and connect the PV connectors to corresponding terminals only after ensuring polarity correctness.
- During the installation and operation of the inverter, please ensure that the positive or negative electrodes of PV strings do not short-circuit to the ground. Otherwise, an AC or DC short-circuit may occur, resulting in equipment damage. The damage caused by this is not covered by the warranty.
- Electric arc or contactor over-temperature may occur if the DC connectors are not firmly in place, and the loss caused is not covered by the warranty.
- If the DC input cables are reversely connected or the positive and negative terminals of different MPPT are shorted to ground at the same time, while the DC switch is in the "ON" position, do not operate immediately. Otherwise, the inverter may be damaged. Please turn the DC switch to "OFF" and remove the DC connector to adjust the polarity of the strings when the string current is lower than 0.5 A.
- Use the DC connectors supplied with the product for DC cable connection. Using incompatible DC connectors may result in serious consequences, and the device damage is not covered under warranty.
- Inverters do not support full parallel connection of strings (Full parallel connection refers to a connection method in that strings are connected in parallel and then connected to the inverter separately).
- Do not connect one PV string to multiple inverters. Otherwise, the inverters may be damaged.

#### NOTICE

The following requirements about PV string connection must be met. Otherwise, it may cause irreversible damage to the inverter, which is not covered by the warranty.

- Mixed use of PV modules of different brands or models in one MPPT circuit, or PV modules of different orientation or inclination in a string may not damage inverter, but will cause system bad performance!
- The inverter enters standby state when the input voltage ranges between 560 V and 600 V. The inverter returns to running state once the voltage returns to the MPPT operating voltage range, namely, 40 V to 560 V.

#### NOTICE

Note the following items when laying cables on site:

- The axial tension on PV connectors must not exceed 80 N. Avoid axial cable stress on the connector for a long time during field wiring.
- Radial stress or torque must not be generated on PV connectors. It may cause the connector waterproof failure and reduce connector reliability.
- Leave at least 50 mm of slack to avoid the external force generated by the cable bending affecting the waterproof performance.
- Refer to the specifications provided by the cable manufacturer for the minimum cable bending radius. If the required bending radius is less than 50 mm, reserve a bending radius of 50 mm. If the required bending radius is greater than 50 mm, reserve the required minimum bending radius during wiring.

#### 5.6.1 PV Input Configuration

- The inverters SG3.0RS / SG4.0RS / SG5.0RS / SG6.0RS have two PV inputs, each with independent MPP tracker. Each DC input area can operate independently.
- The PV strings to the same DC input area should have the same type, the same number of PV panels, identical tilt and identical orientation for maximum power.
- The PV strings to two DC input areas may differ from each other, including PV module type, number of PV modules in each string, angle of tilt, and installation orientation.


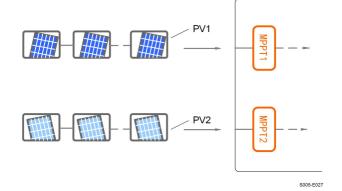


figure 5-3 PV Input Configuration (SG6.0RS for example)

Prior to connecting the inverter to PV inputs, the specifications in the following table should be met:

Inverter Model	Open-circuit Voltage Limit	Max. current for input connector
All models	600 V	20 A


#### 5.6.2 Assembling the PV Connectors

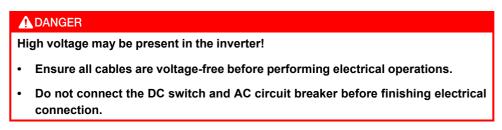


0

To ensure IP65 protection, use only the supplied connector.

Step 1 Strip the insulation from each DC cable by 7 mm-8 mm.

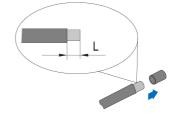

Step 2 Assemble the cable ends with the crimping pliers.

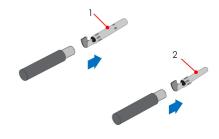

1: Positive crimp contact

- 2: Negative crimp contact
- **Step 3** Lead the cable through cable gland, and insert the crimp contact into the insulator until it snaps into place. Gently pull the cable backward to ensure firm connection. Tighten the cable gland and the insulator (torque 2.5 N.m to 3 N.m).



Step 4 Check for polarity correctness.


### NOTICE

If the PV polarity is reversed, the inverter will be in a fault or alarm state and will not operate normally.

- - End


#### 5.6.3 Installing the PV Connectors


Step 1 Rotate the DC switch to "OFF" position.

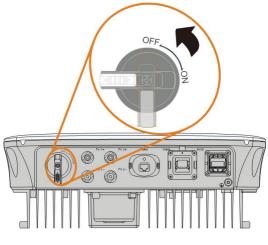

S005-E032


**Step 2** Check the cable connection of the PV string for polarity correctness and ensure that the open circuit voltage in any case does not exceed the inverter input limit of 600 V.

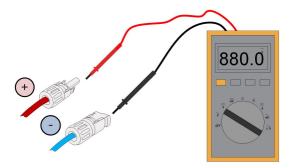

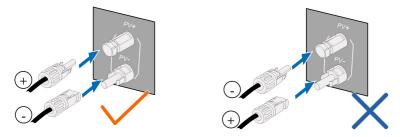

**Step 3** Connect the PV connectors to corresponding terminals until there is an audible click.

- Step 4 Seal the unused PV terminals with the terminal caps.
- **Step 5** Connect the PV+ and PV- of the optimizer to the positive and negative terminals in the junction box of the PV module respectively.

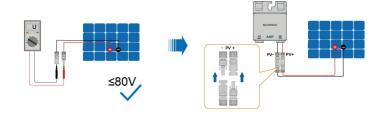


#### NOTICE

Do not connect the PV module to the OUT+ and OUT- of the optimizer. Otherwise, the optimizer or PV module will be damaged, and the loss is not covered by the warranty.

SUNGROW

**Step 6** Connect the positive probe of a multimeter to OUT+ of the optimizer, and the negative probe of the multimeter to OUT— of the optimizer to check whether the optimizer is faulty. If typical value of output voltage is 1V, no fault occurs to the optimizer.

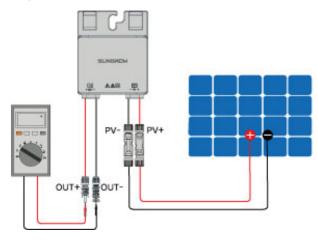

#### NOTICE

1. Use a multimeter to measure the output voltage of each optimizer after wiring.

2. Considering the effect of the accuracy of the multimeter on the actual measurement on site, the optimizer can function normally as long as the output voltage falls in the range of 0.9V - 1.1V.


3. If the output voltage is less than 0.9 V, check the following items:

- Check whether the sunlight is sufficient.
- Check whether the input side of the optimizer is connected to the PV module.
- If the fault is not caused by foregoing reasons and still persists, please replace the optimizer.

4. If the output voltage is greater than 1.1 V, the optimizer fails. Please replace the optimizer.

5. If no voltage is detected, replace the optimizer or component.

Step 7 When connecting multiple optimizers, connect OUT- of the first optimizer to OUT + of the second optimizer, and so on. Use a multimeter to measure the optimizer voltage. If typical value of output voltage is 1V\*N (N is the number of optimizers), no fault occurs to the system.

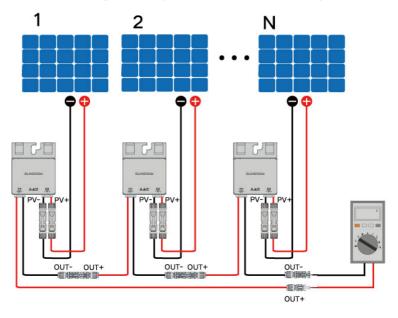


#### NOTICE

Whether connecting OUT+ of the first optimizer to OUT- of the second optimizer or connecting OUT- of the first optimizer to OUT+ of the second optimizer is dependent on the polarity of the extension cable that is connected to the inverter on site.

SUNGROW

**Step 8** Connect OUT+ of the first optimizer and OUT- of the last optimizer to the PV input terminals of the inverter.

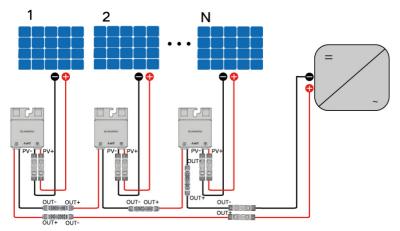

#### 

If each PV module is equipped with an optimizer, the total power of PV modules in a PV input shall not exceed the maximum input power of a single PV input of the inverter.

#### NOTICE

- Branch-connector connection on the input side of the inverter is not supported by the optimizer.
- Please refer to the optimizer user manual for details.



- - End

### 5.7 WiNet-S Connection


The WiNet-S module supports Ethernet communication and WLAN communication. It is not recommended to use both communication methods at the same time.

For details, see the quick guide for the WiNet-S module. Scan the following QR code for the quick guide.




#### 5.7.1 Ethernet Communication


**Step 1 (Optional)** Strip the insulation layer of the communication cable with an Ethernet wire stripper, and lead the corresponding signal cables out. Insert the stripped communication cable into the RJ45 plug in the correct order, and crimp it with a crimper.

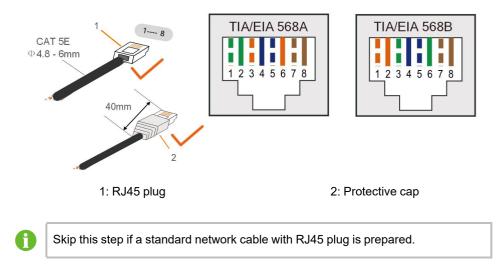


Step 2 Unscrew the swivel nut from the communication module and take out the inner sealing ring.

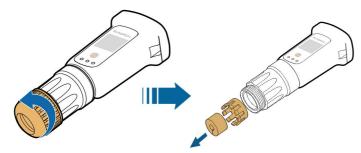




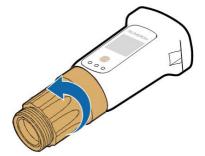



**Step 4** Thread the network cable through the swivel nut and gasket. Afterwards, route the cable into the opening of the sealing. Finally, insert the cable through the housing.

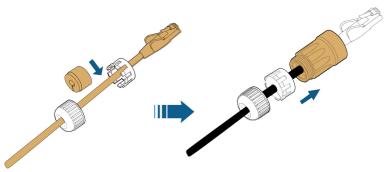

**Step 5** Insert the RJ45 plug into the front plug connector until there is an audible click and tighten the housing. Install the gasket and fasten the swivel nut.

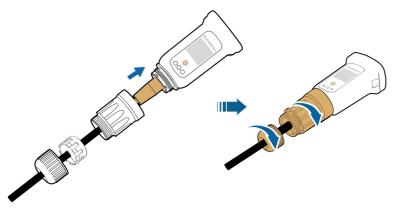

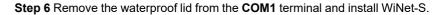

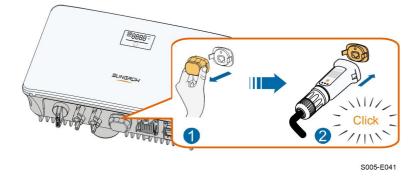


Step 7 Slightly shake it by hand to determine whether it is installed firmly.

- - End

#### 5.7.2 WLAN Communication

Step 1 Remove the waterproof lid from the COM1 terminal.

**Step 2** Install the module. Slightly shake it by hand to determine whether it is installed firmly, as shown below.

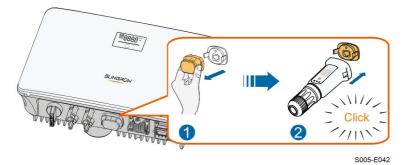


Step 3 Refer to the guide delivered with the module for the set-up.


- - End

### 5.8 Smart Meter Connection

The inverter can provide export control but will require the use of a external smart meter. The export control functionality has not been tested to AS/NZS 4777.2:2020.


The energy meter is mainly used to detect the direction and magnitude of the current. And the energy meter data may not be used for billing purposes.

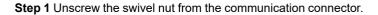

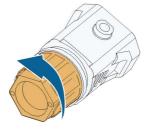


S005-E007


Step 2 Remove the seal and lead the cable through the cable gland.

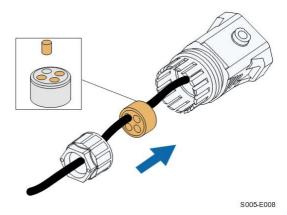


Step 3 Remove the cable jacket and strip the wire insulation.

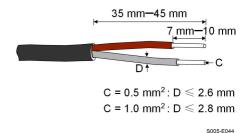

**Step 4** (Optional) When using a multi-core multi-strand wire cable, connect the wire head to the cord end terminal. In case of single-strand copper wire, skip this step.

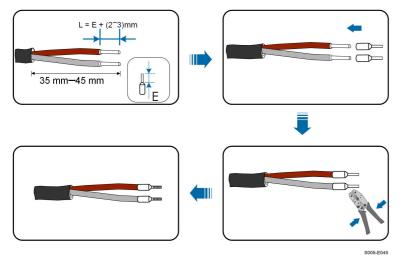


**Step 5** Plug the wires into the corresponding terminals as shown in the following figure. Ensure that the wires are securely in place by slightly pulling them.

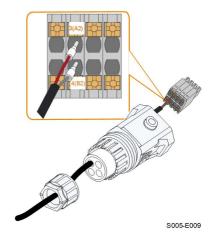


Step 6 Insert the terminal plug into the COM2 terminal at the bottom side of the inverter and then install the housing.



Step 7 Slightly pull out the cable and then fasten the swivel nut. Lock the connector with the screw.

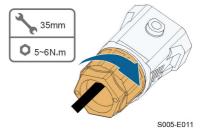

**Step 8** The other end of the communication cable is connected to the RS485A and RS485B ports of the smart meter.

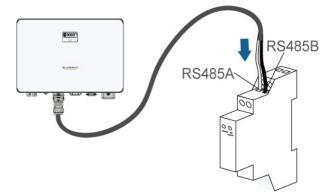


- - End

### 5.9 DRM Connection

In Australia and New Zealand, the inverter supports DRM0 as specified in the standard AS/ NZS 4777.


The DRM0 mode is asserted by shorting terminals **R** and **C** on the inverter.

Step 1 Unscrew the swivel nut from the communication connector.

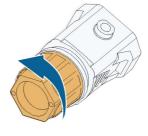


S005-E007

Step 2 Remove the seal and lead the cable through the cable gland.

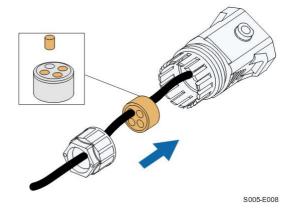


Step 3 Remove the cable jacket and strip the wire insulation.

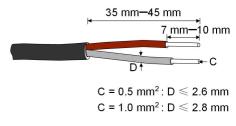


S005-E044


**Step 4** (Optional) When using a multi-core multi-strand wire cable, connect the wire head to the cord end terminal. In case of single-strand copper wire, skip this step.

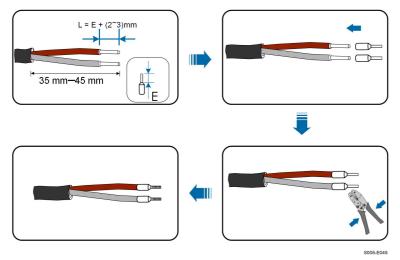


**Step 5** Plug the wires into the corresponding terminals as shown in the following figure. Ensure that the wires are securely in place by slightly pulling them.

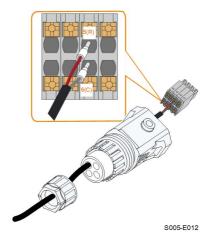

Step 6 Insert the terminal plug into the COM2 terminal at the bottom side of the inverter and then install the housing.

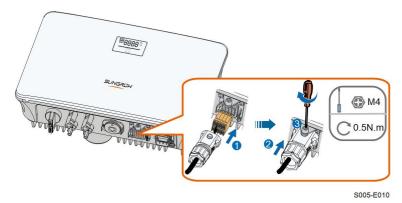

Step 7 Slightly pull out the cable and then fasten the swivel nut. Lock the connector with the screw.

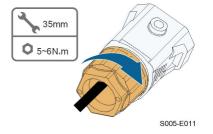

- - End



# 6 Commissioning

# 6.1 Inspection Before Commissioning

Check the following items before starting the inverter:

- All equipment has been reliably installed.
- DC switch(es) and AC circuit breaker are in the "OFF" position.
- The ground cable is properly and reliably connected.
- The AC cable is properly and reliably connected.
- The DC cable is properly and reliably connected.
- The communication cable is properly and reliably connected.
- The unused terminals are sealed.
- No foreign items, such as tools, are left on the top of the machine or in the junction box (if there is).
- The AC circuit breaker is selected in accordance with the requirements of this manual and local standards.
- All warning signs & labels are intact and legible.

## 6.2 Powering on the System

If all of the items mentioned above meet the requirements, proceed as follows to start up the inverter for the first time.

Strictly follow the preceding sequence. Otherwise, the product may be damaged, and the loss caused is not covered by the warranty.

**Step 1** Turn on the AC circuit breaker between the inverter and the grid.



Before closing the AC circuit breaker between the inverter and the power grid, use a multimeter that is set to the AC gear to ensure that the AC voltage is within the specified range. Otherwise, the inverter may be damaged.

- Step 2 Rotate the DC switch of the inverter to "ON" position.
- Step 3 Turn on the external DC switch (if applicable) between the inverter and the PV string.
- Step 4 If the irradiation and grid conditions meet requirements, the inverter will operate normally. Observe the LED indicator to ensure that the inverter operates normally. Refer to "2.4 LED Panel" for LED screen introduction and LED indicator definition.

Step 5 Refer to the quick guide for WiNet-S. for its indicator definition.

- - End

## 6.3 App Preparation

- Step 1 Install the iSolarCloud App with latest version. Refer to "7.2 Install iSolarCloud".
- **Step 2** Register an account. Refer to "7.4 Device Commissioning". If you have got the account and password from the distributor/installer or SUNGROW, skip this step.
- **Step 3** Download the firmware package to the mobile device in advance. Refer to "7.4 Device Commissioning". This is to avoid download failure due to poor on-site network signal.

- - End

## 6.4 Creating a Plant

Prerequisites:

- The account and password for logging in to iSolarCloud App have been obtained from the distributor/installer or SUNGROW.
- The communication device is normally connected to the inverter.
- System positioning is enabled and iSolarCloud App is allowed to access location information.

15:08   0.0K/s & 영 환 More SUNGROW
Welcome to iSolarCloud Account Select your server
User Manual
FAQs
Terms of Service
Privacy Policy
Language
Cancel

# Step 1 Open the App, tap More in the upper right corner of the interface, and select the correct access address.

figure 6-1 Select Access Address

Step 2 Enter the account and password on the login interface, and tap LOGIN to log in.

Step 3 Tap  $\textcircled{} \oplus$  in the upper right corner to enter the plant creation interface.



**Step 4** Fill in the content according to actual needs, and the parameters containing \* are required. Tap **Next** to enter the next interface.


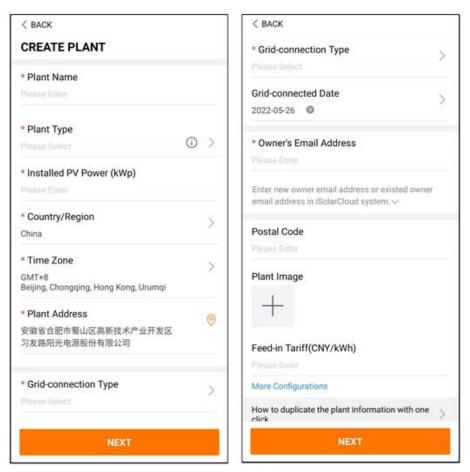


figure 6-2 Plant Creation Settings


Parameter Name	Description
Plant name	The name of the plant.
Plant type	The type of the plant, which should be set corresponding to the actual plant type.
Installed power	The installed power of the plant.
Country/Region	The country/region where the plant is located.
Time zone	The time zone where the plant is located, which can be filled through automatic positioning and manual input.

Parameter Name	Description	
	The location of the plant, which can be filled in two ways:	
Plant address	Manually: Manually enter the plant location in the input box.	
Plant address	• Automatically: Tap 📀 to automatically obtain the current location or search for the location of the plant, and then tap <b>Confirm</b> .	
Grid-connec-	The way the plant is connected to the grid, including 100% Feed-in,	
tion type	Self-Consumption, Zero Export, and Off-grid.	
Grid-connected date	The time when the plant is connected to the grid.	
Owner's email	Fill in the owner information of the plant, and both registered and un-	
address	registered email addresses are supported.	
Postal code	The postal code of the place where the plant is located.	
Plant image	Take photos of the plant and upload them.	
	The feed-in tariff can be set in two ways:	
	Enter the feed-in tariff directly in the input box.	
Feed-in tariff	• Tap More Configurations, select the tariff unit, enter the feed-in tariff, and tap Confirm. Enable Time-of-Use Tariff if needed. Tap Add Time-of-Use Tariff, add time intervals and price, and tap Confirm. Please note that if Time-of-use Tariff is enabled, the time periods shall cover 24 hours a day, and can not overlap.	
	Set the consumption tariff as follows:	
Consumption tariff	• Tap <b>More Configurations</b> , select the tariff unit, enter the consump- tion tariff, and tap <b>Confirm</b> . Enable <b>Time-of-Use Tariff</b> if needed, and refer to the setting methods of the feed-in tariff.	


Step 5 Bind a device through scanning the QR code on the device, manually inputting the device S/ N, or uploading a QR code picture. Tap Confirm after the QR code is identified or the S/N is verified.

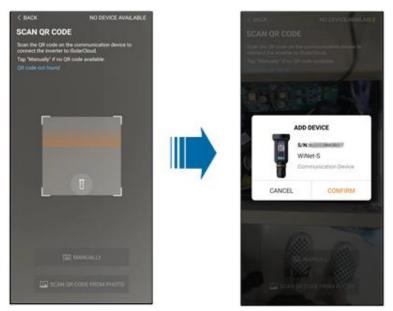

Step 6 After a device is bound, tap Device and Commissioning to go to corresponding interface.

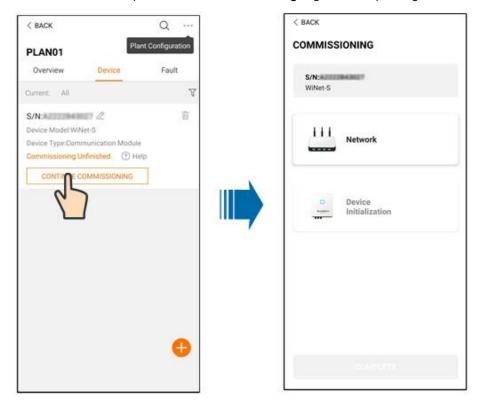

Step 7 Tap Network Configuration to go to the WLAN connection interface. Tap the home network in the WLAN list, enter the password, and then tap Confirm.

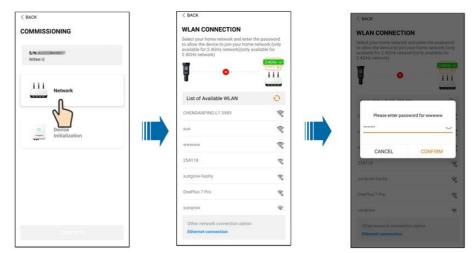


**Step 8** Enter the **Activate EasyConnect** interface, and press the multi-function button on the WiNet-S to enable the Easyconnect mode according to the prompt on the screen. The App automatically enters a waiting processing interface if this mode is enabled, and automatically returns to the commissioning interface after the processing is completed.



## NOTICE

Only the 2.4 GHz working band is supported under the networking mode. If the Easyconnect fails, please refer to other methods in the WiNet-S manual to establish the connection. Step 9 Tap Device Initialization to go to the Device initialization interface. Set the initialization protection parameters as needed and tap Settings to return to the commissioning interface.

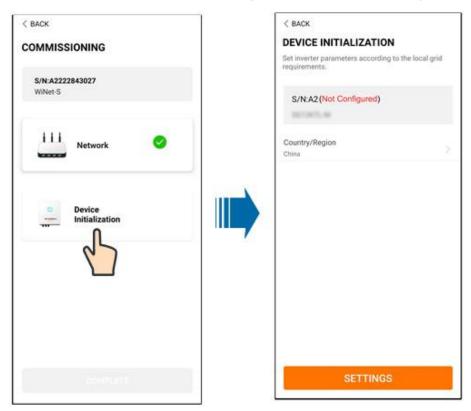

When the country is set to Australia, additionally set the applicable network service provider and then the grid type.



The image shown here is for reference only. Refer to the actual interface for the supported network service providers.

table 6-1 Description of Network Service	Provider and Grid Type
--	------------------------

Network Service Provider	Grid Type
AS/NZS 4777.2:2015	/
AS/NZS 4777.2:2020	1
Australia A	1
AS/NZS 4777.2:2020	1
Australia B	,
AS/NZS 4777.2:2020	1
Australia C	,
ENERGEX & Ergon Energy	<ul> <li>STNW1170: single-phase &lt; 10 kVA &amp; three-phase &lt; 30 kVA</li> </ul>
	• STNW1174: 30 kVA < $P_n \le 1500$ kVA
Jemena	<ul> <li>≤ 10 kVA per phase (or 30 kVA per three phase)</li> </ul>
	• ELE GU 0014: 30 kVA-200 kVA
Endeavour Energy	MDI 0043
Ausgrid	NS194
CitiPower & Powercor	<ul> <li>≤ 5 kVA for single-phase &amp; 30 kVA for three-phase</li> </ul>
	<ul> <li>&gt; 30 kVA three-phase</li> </ul>
United Energy	• UE-ST-2008.1: ≤ 10 kVA for single- phase & 30 kVA for three-phase
	• UE-ST-2008.2: > 30 kVA three-phase
PowerWater	Embedded Generation Notice Photovoltaic Systems:2020
	<ul> <li>TS129-2019: &lt; 10 kW for single-phase</li> <li>&amp; 30 kW for three-phase</li> </ul>
SA Power Networks	• TS130-2017: > 30 kW & ≤ 200 kW
	• TS131-2018: > 200 kW
Horizon Power	• HPC-9DJ-13-0001-2019: ≤ 10kVA for single-phase & 30 kVA for three-phase
	• HPC-9DJ-13-0002-2019: > 30kVA & ≤1MVA
westernpower	EDM#33612889-2019
AusNet Services	Basic Micro Embedded Generation: 2020

\* For compliance with AS/NZS 4777.2:2020, please select from Australia A/B/C. Please contact your electricity grid operator for which region to use.

- 6
- Please check the country supported by this product at http:// support.sungrowpower.com/.
- Set **Country/Region** to the country/region where the inverter is installed. Otherwise, the inverter may report a fault.
- **Step 10** After a plant is successfully created, return to the App home page to view the plant information.

- - End

## 6.5 Initializing the Device

The inverter is successfully connected to the router.

If there is no latest equipment upgrade package, skip steps 1 and 2.

The actual initializing procedure may differ due to different countries. Please follow the actual App guidance. **Step 1** If a latest equipment upgrade package is available, the following prompt window pops up. Tap **UPDATE NOW** to download the latest update package.



figure 6-3 Upgrade Reminder

Step 2 After download, it would take around 15 minutes to update. After successful upgrade, the screen will show the version numbers before and after the upgrade as well as the upgrade time. Tap NEXT.

XCANCEL	× CANCEL
UPDATING INVERTER	FIRMWARE UPDATED
Please wait, it would take around 15 minute(s).	Firmware is up to date.
Note: Make sure the DC side is powered on when updating. Stay connected to this device and stay on this page for a successful update.	
$(\uparrow)$	Old Version: BERYL-S_03011.01.17 BERYL-S_01011.01.04
$\bigcirc$	New Version: BERYL-S_03011.01.16 BERYL-S_01011.01.03
0%	Update Time: 2021-02-05 16:32:49

figure 6-4 Upgrading Inverter

## NOTICE

If the communication equipment is upgraded, after successful upgrade, check and confirm that the phone is connected to the inverter WLAN.

**Step 3** Tap **Country/Region** and select the country where the inverter is installed at. The supported countries and corresponding settings are as follows.

Country/Region	Setting
Belgium ("BE")	Belgium
Netherlands ("NL")	Netherlands
Portugal / Turkey / Hungary / Romania / Greece / Lithuania	EN50549-1, with proper manual settings
Poland ("PL")	Poland
United Kingdom	United Kingdom
	United Kingdom_G98
France	France
Italy	Italy
Spain	Spain
Australia ("AU")	Australia
New Zealand ("NZ")	New Zealand
Countries not listed above	Other 50Hz or Other 60Hz

### NOTICE

The parameter Country/Region must be set to the country (region) where the inverter is installed at. Otherwise, the inverter may report errors. **Step 4** When the country is set to Australia, additionally set the applicable network service provider and then the grid type.



The image shown here is for reference only. Refer to the actual interface for the supported network service providers.

Network Service Provider	Grid Type
AS/NZS 4777.2:2015	1
AS/NZS 4777.2:2020	
Australia A	7
AS/NZS 4777.2:2020	
Australia B	7
AS/NZS 4777.2:2020	
Australia C	1
ENERGEX & Ergon Energy	<ul> <li>STNW1170: single-phase &lt; 10 kVA &amp; three-phase &lt; 30 kVA</li> </ul>
	• STNW1174: 30 kVA < $P_n \le 1500 \text{ kVA}$
Jemena	<ul> <li>≤ 10 kVA per phase (or 30 kVA per three phase)</li> </ul>
	• ELE GU 0014: 30 kVA-200 kVA
Endeavour Energy	MDI 0043
Ausgrid	NS194

Network Service Provider	Grid Type
CitiPower & Powercor	<ul> <li>≤ 5 kVA for single-phase &amp; 30 kVA for three-phase</li> </ul>
	<ul> <li>&gt; 30 kVA three-phase</li> </ul>
United Energy	<ul> <li>UE-ST-2008.1: ≤ 10 kVA for single- phase &amp; 30 kVA for three-phase</li> </ul>
	• UE-ST-2008.2: > 30 kVA three-phase
PowerWater	Embedded Generation Notice Photovoltaic Systems:2020
SA Power Networks	<ul> <li>TS129-2019: &lt; 10 kW for single-phase &amp; 30 kW for three-phase</li> </ul>
	• TS130-2017: > 30 kW & ≤ 200 kW
	• TS131-2018: > 200 kW
Horizon Power	<ul> <li>HPC-9DJ-13-0001-2019: ≤ 10kVA for single-phase &amp; 30 kVA for three-phase</li> </ul>
	• HPC-9DJ-13-0002-2019: > 30kVA & ≤1MVA
westernpower	EDM # 33612889-2019
AusNet Services	Basic Micro Embedded Generation: 2020

\* For compliance with AS/NZS 4777.2:2020, please select from Australia A/B/C. Please contact your electricity grid operator for which region to use.

**Step 5** Initialize parameters according to local grid requirements, including grid type, reactive power regulation mode, etc. The screen displays that the inverter is successfully configured.

Country/Region Netherlands	23
Grid Type Low Voltage	\$
Feed-in Limitation	UT
Feed-in Limitation Value 20.00 kW	
Feed-in Limitation Ratio	
Reactive Power Regulation Mode	2
Reactive Power Ratio	
NEXT	

figure 6-5 Initializing Parameters

- - End

# 6.6 Configuring the Plant

The inverter is successfully added to the plant and initialized. Refer to the guidance in previous sections.

The distributor/installer who creates a plant for the end user needs to get the end user's email address. In configuring a plant, the e-mail address is required, and each e-mail address can be registered only once. Step 1 The App screen will display the added inverter. Tap NEXT to configure the plant.

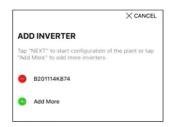


figure 6-6 Display the Added Inverter

Step 2 Fill in the plant information. The fields marked with \* must be filled in.

< BACK	$\times$ cancel
CONFIGURE PLANT	
Enter plant information.	
<ul> <li>Plant Name</li> </ul>	
B201114K874	
Country/Region Please Select	~
Time Zone Please Select Locating.	
<ul> <li>Plant Address</li> <li>Please Enter</li> </ul>	
Postal Code Please Enter	
Grid-connected Date	
2021-02-05	$\sim$
NEXT	

figure 6-7 Entering Plant Information

**Step 3 (Optional)** Fill in the tariff information. The electricity price can be set to a specific value or Time-of-Use tariff.

< back	imes cancel
CONFIGURE TARIFF	
Enter tariff information to calculate your plant revenue.	
Unit	
CNY	$\sim$
Feed-in Tariff (CNY/kWh) Please Enter Time-of-Use Tarif	U
Consumption Tariff (CNY/kWh) Please Enter	
Time-of-Use Tariff	
NEXT	

figure 6-8 Entering Tariff Information

**Step 4** Fill in the end user's e-mail address. The first time you fill in the end user's e-mail address, the system will create an account for the end user and send an email to the end user. The end user can activate the account via the email.



The Distributor/installer creates plants for the end user and can manage the plants by default.

figure 6-9 Entering Owner's e-mail

Step 5 Tap NEXT to wait for the inverter to connect to the iSolarCloud.

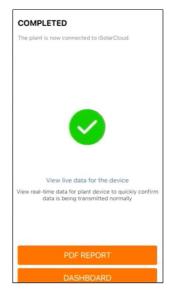


figure 6-10 Configuration Completed

Step 6 (Optional) Tab View live data for the device, tick Inverter or Total Plant Devices and tab ALL PLANTS OPEN. The clock symble indicates that the live data view function is successfully enabled. Tab the inverter to view the live data about voltage, current, power or curve.

< BACK	Q	< BACK	
Testsungrow		Testsungrow	
Current: All	$\nabla$	Current: All	
SG5.0RS(COM1-001)_001_001 Inverter Total Active Power: 0 W Total DC Power: 0 W	Ō	SG5.0RS(COM1-001]_001_001 Inverter Total Active Power: 0 W Total DC Power: 0 W	
Total Plant De	vices 🔽	Total Plant De	vicor
Live data can be used for up to 3 hours p	ber day.	Total Plant De	vices
ALL PLANTS CLOSED		CLOSE	
ALL PLANTS OPEN		OPEN	

figure 6-11 Live Data View Function Setting

1

Contact Sungrow service to enable live data function of devices. Once enabled, live data function is available for 3 hours per day by default. To make it available for 24 hours, contact SUNGROW.

Step 7 Tab BACK to the COMPLETED screen. Tab PDF REPORT to export the plant configuration report.



**Step 8** Tab **BACK** to the **COMPLETED** screen. Tab **DASHBOARD** to return and manually refresh the page until the newly created plant is displayed with status commissioned.

- - End

## 6.7 Optimizer Physical Layout (Optional)

- If PV modules are installed and optimizers are configured, check to ensure that all devices are reliably installed.
- Remove QR code labels from the optimizers and attach them to corresponding square cells on the physical layout.
- Please refer to the optimizer user manual for details of the optimizer physical layout.



# 7 iSolarCloud App

## 7.1 About iSolarCloud


The iSolarCloud App is a mobile application used for power plant management. The App provides plant operation analysis service and enables intelligent mobile O&M. It is designed with functions such as plant operation data display, rapid plant access, remote parameter setting, quick fault location and notification, and power yield and revenue analysis. With iSo-larCloud, convenient and efficient end-to-end plant O&M is allowed.

#### **Connection Methods**

Users can log in to the App via remote connection or local access for plant monitoring.

#### Login by Establishing a Direct Connection (Local)

Establish communication between the mobile phone and the WiFi wireless communication module or the inverter's built-in Bluetooth module to enable mobile maintenance of the inverter. Users can check the information about and set parameters for the inverter.

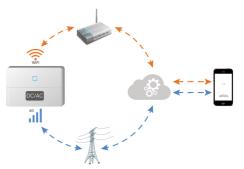

Login Via Account and Password (Remote)

Login via Bluetooth connection is applicable only for SUNGROW inverters with built-in Bluetooth modules. Please consult your retailer/installer about whether the inverter is equipped with a Bluetooth module.

#### Login with an Account (Remote)

Establish communication between the communication module and the home router or base station to enable data exchange between the inverter and the cloud server. Users can check the inverter data or send commands to control the inverter on the App.

i



Direct Login (Near end)

## 7.2 Install iSolarCloud

This section introduces how to download and install the iSolarCloud App.

### Procedure

**Step 1** Search for **iSolarCloud** in App Store, Google Play or other App stores, or scan the QR code below with a mobile phone and download the App by following the onscreen instructions.



**Step 2** Tap the downloaded installation package and follow the onscreen instructions to complete the installation. The icon of iSolarCloud will then appear on the screen.



- - End

## 7.3 User Identity

There are two types of user accounts: Owner and Retailer/Installer.

The **Owner** can view the plant information, create a plant, set common parameters, and share a plant, etc.

The **Retailer/Installer** can assist the Owner in creating/managing a plant, manage users and organizations, and set grid-related parameters and advanced parameters, etc.

The default account and password are as shown in the table below. Please change the password as soon as possible to keep your account secure.

table 7-1 Default account and password

Role	Account Name	Password	
User	user	pw1111	
Retailer/Installer	admin	pw8888	

## 7.4 Device Commissioning

For device commissioning operations, please refer to the **Device Commissioning** in the **iSolarCloud App User Manual**. Alternatively, you can scan the QR code below to access the **Device Commissioning** section of the manual.



# 8 System Decommissioning

# 8.1 Disconnecting the Inverter

## 

### Danger of burns!

Even if the inverter is shut down, it may still be hot and cause burns. Wear protective gloves before operating the inverter after it cools down.

For maintenance or other service work, the inverter must be switched off. Proceed as follows to disconnect the inverter. Lethal voltages or damage to the inverter will follow if otherwise.

Step 1 Disconnect the external AC circuit breaker and prevent it from inadvertent reconnection.

Step 2 Rotate the DC switch to the "OFF" position for disconnecting all of the PV string inputs.

Step 3 Wait about 10 minutes until the capacitors inside the inverter completely discharge.

Step 4 Ensure that the DC cable is current-free with a current clamp.

- - End

## 8.2 Dismantling the Inverter


## 

Risk of burn injuries and electric shock!

After the inverter is powered off for 10 minutes, measure the voltage and current with professional instrument. Only when there is no voltage nor current can operators who wear protective equipment operate and maintain the inverter.

- Before dismantling the inverter, disconnect the inverter from both AC and DC power sources.
- A
- If there are more than two layers of inverter DC terminals, dismantle the outer DC connectors before dismantling the inner ones.
- If the original packing materials are available, put the inverter inside them and then seal them using adhesive tape. If the original packing materials are not available, put the inverter inside a cardboard box suitable for the weight and size of this inverter and seal it properly.

Step 1 Refer to "5 Electrical Connection", for the inverter disconnection of all cables in reverse steps. In particular, when removing the DC connector, use an MC4 wrench to loosen the locking parts and install waterproof plugs.

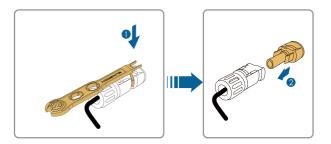

Step 2 Refer to "4 Mechanical Mounting", to dismantle the inverter in reverse steps.

Step 3 If necessary, remove the wall-mounting bracket from the wall.

**Step 4** If the inverter will be used again in the future, please refer to "3.2 Inverter Storage" for a proper conservation.

- - End

## 8.3 Disposal of Inverter

Users take the responsibility for the disposal of the inverter.

#### A WARNING

Please scrap the inverter in accordance with relevant local regulations and standards to avoid property losses or casualties.

#### NOTICE

Some parts of the inverter may cause environmental pollution. Please dispose of them in accordance with the disposal regulations for electronic waste applicable at the installation site.

SUNGROW

# 9 Troubleshooting and Maintenance

# 9.1 Troubleshooting

Once the inverter fails, the fault information is displayed on the App interface. If the inverter is equipped with an LCD screen, the fault information can be viewed on it.

The fault codes and troubleshooting methods of all PV inverters are detailed in the table below, and only some of the faults may occur to the model you purchased. When a fault occurs, you can check the fault information according to the fault code on the mobile app.

Fault Code	Fault Name	Corrective Measures
2, 3, 14, 15	Grid Overvoltage	Generally, the inverter will be reconnected to the grid after the grid returns to normal. If the fault oc- curs repeatedly:
		<ol> <li>Measure the actual grid voltage, and contact the local electric power company for solutions if the grid voltage is higher than the set value.</li> <li>Check whether the protection parameters are appropriately set via the App or the LCD. Modify the overvoltage protection values with the con- sent of the local electric power operator.</li> </ol>
		<ol> <li>Contact Sungrow Customer Service if the pre- ceding causes are ruled out and the fault persists.</li> </ol>
4, 5 Gri	Grid Undervoltage	Generally, the inverter will be reconnected to the grid after the grid returns to normal. If the fault oc-
		1. Measure the actual grid voltage, and contact the local electric power company for solutions if the grid voltage is lower than the set value.
		2. Check whether the protection parameters are appropriately set via the App or the LCD.
		3. Check whether the AC cable is firmly in place.
		4. Contact Sungrow Customer Service if the pre- ceding causes are ruled out and the fault persists.

Fault Code	Fault Name	Corrective Measures
	Grid	Generally, the inverter will be reconnected to the
8	Overfrequency	grid after the grid returns to normal. If the fault oc-
		curs repeatedly:
		1. Measure the actual grid frequency, and contact
		the local electric power company for solutions if
	Grid	the grid frequency is beyond the set range.
9	Underfrequency	2. Check whether the protection parameters are
		appropriately set via the App or the LCD.
		3. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the fault persists.
		Generally, the inverter will be reconnected to the
		grid after the grid returns to normal. If the fault oc-
		curs repeatedly:
		1. Check whether the grid supplies power reliably.
		2. Check whether the AC cable is firmly in place.
	Grid Power	3. Check whether the AC cable is connected to
10	Outage	the correct terminal (whether the live wire and
		the N wire are correctly in place).
		4. Check whether the AC circuit breaker is
		connected.
		5. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the fault persists.
		1. The fault can be caused by poor sunlight or
		damp environment, and generally the inverter will
		be reconnected to the grid after the environment
12	Excess Leakage	is improved.
12	Current	2. If the environment is normal, check whether
		the AC and DC cables are well insulated.
		3. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the fault persists.
13		Generally, the inverter will be reconnected to the
		grid after the grid returns to normal. If the fault oc-
		curs repeatedly:
	Grid Abnormal	1. Measure the actual grid, and contact the local
		electric power company for solutions if the grid
		parameter exceeds the set range.
		2. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the fault persists.

Fault Code	Fault Name	Corrective Measures
		Generally, the inverter will be reconnected to the
		grid after the grid returns to normal. If the fault oc- curs repeatedly:
		1. Measure the actual grid voltage. If grid phase
	Grid Voltage	voltages differ greatly, contact the electric power company for solutions.
17	Imbalance	2. If the voltage difference between phases is
		within the permissible range of the local power
		company, modify the grid voltage imbalance pa- rameter through the App or the LCD.
		3. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the fault persists.
		1. Check whether the corresponding string is of reverse polarity. If so, disconnect the DC switch and adjust the polarity when the string current drops below 0.5 A.
28, 29, 208,	PV Reserve Con-	2. Contact Sungrow Customer Service if the pre-
212, 448-479	nection Fault	ceding causes are ruled out and the fault persists.
		*The code 28 to code 29 are corresponding to PV1 to PV2 respectively.
		*The code 448 to code 479 are corresponding to
		string 1 to string 32 respectively.
		1. Check whether the corresponding string is of reverse polarity. If so, disconnect the DC switch and adjust the polarity when the string current drops below 0.5 A.
	PV Reverse Con- nection Alarm	<ol> <li>Contact Sungrow Customer Service if the pre- ceding causes are ruled out and the alarm persists.</li> </ol>
		*The code 532 to code 547 are corresponding to
		string 1 to string 16 respectively.
		*The code 564 to code 579 are corresponding to
		string 17 to string 32 respectively.

Fault Code	Fault Name	Corrective Measures
		Check whether the voltage and current of the in-
		verter is abnormal to determine the cause of the
		alarm.
		1. Check whether the corresponding module is
		sheltered. If so, remove the shelter and ensure
		module cleanness.
		2. Check whether the battery board wiring is
E10 E62 E00	PV Abnormal	loose, if so, make it reliably connected.
548-563, 580- 595	Alarm	3. Check if the DC fuse is damaged. If so, replace
292	Aldini	the fuse.
		4. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the alarm
		persists.
		*The code 548 to code 563 are corresponding to
		string 1 to string 16 respectively.
		*The code 580 to code 595 are corresponding to
		string 17 to string 32 respectively.
	Excessively High Ambient Temperature	Generally, the inverter will resume operation
		when the internal or module temperature returns
		to normal. If the fault persists:
		1. Check whether the ambient temperature of the
		inverter is too high;
		2. Check whether the inverter is in a well-venti-
37		lated place;
51		3. Check whether the inverter is exposed to di-
		rect sunlight. Shield it if so;
		4. Check whether the fan is running properly. Re-
		place the fan if not;
		5. Contact Sungrow Power Customer Service if
		the fault is due to other causes and the fault
		persists.
	Excessively Low	Stop and disconnect the inverter. Restart the in-
43	Ambient	verter when the ambient temperature rises within
	Temperature	the operation temperature range.

Fault Code	Fault Name	Corrective Measures
		Wait for the inverter to return to normal. If the
		fault occurs repeatedly:
		1. Check whether the ISO resistance protection
		value is excessively high via the app or the LCD,
		and ensure that it complies with the local
		regulations.
		2. Check the resistance to ground of the string
		and DC cable. Take corrective measures in case
	Low System Incu	of short circuit or damaged insulation layer.
39	Low System Insu- lation Resistance	3. If the cable is normal and the fault occurs on
		rainy days, check it again when the weather turns
		fine.
		4. If there are batteries, check whether battery
		cables are damaged and whether terminals are
		loose or in poor contact. If so, replace the dam-
		aged cable and secure terminals to ensure a reli-
		able connection.
		5. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the fault persists
		1. Check whether the AC cable is correctly
		connected.
106	Grounding Cable Fault	2. Check whether the insulation between the
		ground cable and the live wire is normal.
		3. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the fault persists
88		1. Disconnect the DC power supply, and check
	Electric Arc Fault	whether any DC cable is damaged, the connec-
		tion terminal or fuse is loose or there is a weak
		contact. If so, replace the damaged cable, fasten the terminal or fuse, and replace the burnt
		component.
		2. After performing step 1, reconnect the DC
		power supply, and clear the electric arc fault via
		the App or the LCD, after that the inverter will re-
		turn to normal.
		<ol><li>Contact Sungrow Customer Service if the fault</li></ol>

Fault Code	Fault Name	Corrective Measures
		1. Check if the meter is wrongly connected.
	Reverse Connec-	2. Check if the input and output wiring of the me-
84	tion Alarm of the	ter is reversed.
01	Meter/CT	3. If the existing system is enabled, please check
		if the rated power setting of the existing inverter
		is correct.
		1. Check whether the communication cable and
		the terminals are abnormal. If so, correct them to
	Meter Communi-	ensure reliable connection.
514	cation Abnormal	2. Reconnect the communication cable of the
514	Alarm	meter.
		3. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the alarm
		persists.
		1. Check whether the output port is connected to
323	Grid Confrontation	actual grid. Disconnect it from the grid if so.
323	Grid Controntation	2. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the fault persists.
	Inverter Parallel 75 Communication Alarm	1. Check whether the communication cable and
		the terminals are abnormal. If so, correct them to
75		ensure reliable connection.
		2. Reconnect the communication cable of the
		meter.
		3. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the alarm
		persists.

Fault Code	Fault Name	Corrective Measures
7, 11, 16, 19–		
25, 30–34, 36,		
38, 40–42, 44–		
50, 52–58, 60–		
69, 85, 87, 92,		1. Wait for the inverter to return to normal.
93, 100–105,		2. Disconnect the AC and DC switches, and dis-
107–114, 116–		connect the battery side switches if there are bat-
124, 200–211,	System Fault	teries. Close the AC and DC switches in turn 15
248–255, 300–	oystelli i dult	minutes later and restart the system.
322, 324–328,		
401–412, 600–		3. Contact Sungrow Customer Service if the pre-
603, 605, 608,		ceding causes are ruled out and the fault persists.
612, 616, 620,		
622–624, 800,		
802, 804, 807,		
1096–1118		
59, 70–74, 76–		1. The inverter can continue running.
83, 89, 216–	System Alarm	2. Check whether the related wiring and terminal
218, 220–233,		are abnormal, check whether there are any for-
432–434, 500–		eign materials or other environmental abnormal-
513, 515–518,	Cystem / tann	ities, and take corresponding corrective
635–638, 900,		measures when necessary.
901, 910, 911,		3. If the fault persists, please contact Sungrow
996		Power Customer Service.
		1. Check whether the corresponding string is of
		reverse polarity. If so, disconnect the DC switch
264-283		and adjust the polarity when the string current
	MPPT Reverse Connection	drops below 0.5 A.
		2. Contact Sungrow Customer Service if the pre-
		ceding causes are ruled out and the fault persists.
		*The code 264 to code 279 are corresponding to
		string 1 to string 20 respectively.

Fault Code	Fault Name	Corrective Measures
		1. The inverter can continue running.
		2. Check whether the related wiring and termi-
		nals are abnormal, check whether there are any
332-363	Boost Capacitor	foreign materials or other environmental abnor-
332-303	Overvoltage Alarm	malities, and take corresponding corrective
		measures when necessary.
		If the fault persists, please contact Sungrow
		Power Customer Service.
		1. Disconnect the AC and DC switches, and dis-
		connect the battery side switches if there are bat-
364-395	Boost Capacitor	teries. Close the AC and DC switches in turn 15
304-393	Overvoltage Fault	minutes later and restart the system.
		2. If the fault persists, please contact Sungrow
		Power Customer Service.
		1. Check whether the number of PV modules of
		the corresponding string is less than other strings.
		If so, disconnect the DC switch and adjust the PV
		module configuration when the string current
		drops below 0.5 A.
1649 1670	String Current	2. Check whether the PV module is shaded;
1548-1579	Reflux	3. Disconnect the DC switch to check whether
		the open circuit voltage is normal when the string
		current drops below 0.5 A. If so, check the wiring
		and configuration of the PV module,
		4. Check whether the orientation of the PV mod-
		ule is abnormal.

Fault Code	Fault Name	Corrective Measures
1600 - 1615, 1632 - 1655	PV Grounding Fault	<ol> <li>When the fault occurs, it is forbidden to directly disconnect the DC switch and unplug PV terminals when the direct current is greater than 0.5 A;</li> <li>Wait until the direct current of the inverter falls below 0.5 A, then disconnect the DC switch and unplug the faulty strings;</li> <li>Do not reinsert the faulty strings before the grounding fault is cleared;</li> <li>If the fault is not caused by the foregoing reasons and still exists, contact Sungrow Customer Service.</li> </ol>
1616	System Hardware Fault	<ol> <li>It is prohibited to disconnect the DC switch when the DC current is greater than 0.5 A when the fault occurs.</li> <li>Disconnect the DC switch only when the inver- ter DC side current drops below 0.5 A.</li> <li>It is prohibited to power up the inverter again. Please contact Sungrow Customer Service.</li> </ol>

Once a fault occurs to the optimizer, the fault information is displayed on the App.

Fault	Fault	Possible	Corrective Method
Code	Name	Cause	Corrective Method
4	Input overvolt- age	The PV voltage is higher than the set pro- tection value	Check whether the open-circuit voltage of the PV module connected to the optimizer exceeds the maximum input voltage allowed by the optimizer.
512	Hardware fault	A hardware fault occurs to the optimizer	Please contact Sungrow Customer Service.
1024	Update failed	The opti- mizer soft- ware fails to upgrade	<ol> <li>The software upgrade may take more than 20 minutes for a large-scale system with a great number of optimizers. Please check the light con- dition, and perform the software upgrade under good light conditions.</li> <li>If the fault persists, please contact Sungrow Customer Service.</li> </ol>

1

- If there is a string current backfeed fault, first check whether the optimizer is offline.
- Contact the dealer if the measures listed in the "Troubleshooting Method" column have been taken but the problem persists. Contact SUNGROW if the dealer fails to solve the problem.

## 9.2 Maintenance

#### 9.2.1 Maintenance Notices

The DC switch can be secured with a lock in the OFF position or a certain angle beyond the OFF position.(For countries "AU" and "NZ")

#### A DANGER

Risk of inverter damage or personal injury due to incorrect service!

- Be sure to use special insulation tools when perform high-voltage operations.
- Before any service work, first disconnect the grid-side AC circuit breaker and check the inverter status. If the inverter indicator is off, please wait until night to disconnect the DC switch. If the inverter indicator is on, directly disconnect the DC switch.
- After the inverter is powered off for 10 minutes, measure the voltage and current with professional instrument. Only when there is no voltage nor current can operators who wear protective equipment operate and maintain the inverter
- Even if the inverter is shut down, it may still be hot and cause burns. Wear protective gloves before operating the inverter after it cools down.
- When maintaining the product, it is strictly prohibited to open the product if there is an odor or smoke or if the product appearance is abnormal. If there is no odor, smoke, or obvious abnormal appearance, repair or restart the inverter according to the alarm corrective measures. Avoid standing directly in front of the inverter during maintenance.

### **A**CAUTION

To prevent misuse or accidents caused by unrelated personnel: Post prominent warning signs or demarcate safety warning areas around the inverter to prevent accidents caused by misuse.

#### NOTICE

Restart the inverter only after removing the fault that impairs safety performance. As the inverter contains no component parts that can be maintained, never open the enclosure, or replace any internal components.

To avoid the risk of electric shock, do not perform any other maintenance operations beyond those described in this manual. If necessary, contact your distributor first. If the problem persists, contact SUNGROW. Otherwise, the losses caused is not covered by the warranty.

#### NOTICE

Touching the PCB or other static sensitive components may cause damage to the device.

- Do not touch the circuit board unnecessarily.
- Observe the regulations to protect against electrostatic and wear an anti-static wrist strap.

### 9.2.2 Quick Shutdown

The PV system can perform a quick shutdown, reducing the output voltage of strings to below 30 V within 20 s.

Triggering methods of quick shutdown:

- Method 1: Turn off the AC circuit breaker between the inverter and the grid.
- Method 2: Connect RSD-1 and RSD-2 in COM2 port to trigger quick shutdown. Disconnect RSD-1 and RSD-2 to exit the quick shutdown mode.

#### NOTICE

- The quick shutdown is not supported if optimizers are configured for some PV modules.
- Please check regularly whether the quick shutdown function is normal.

ltem	Method	Period
	Check the temperature and dust of the	Six months to a year
Device clean	device. Clean the device enclosure if	(depending on the dust con-
	necessary.	tents in air)
	Check whether all cable are firmly con-	
Flectrical	nected in place.	6 months after commissioning and then once or twice a year
connection	Check whether there is damage to the	
connection	cables, especially the surface in con-	
	tact with metal.	
	• Visual check for any damage or deformation of the microinverter.	
General status of the system	Check any abnormal noise during the operation.	Every 6 months
	Check each operation parameter.	
	• Be sure that nothing covers the heat sink of the device.	

## 9.2.3 Routine Maintenance

# 10 Appendix

# 10.1 Technical Data

Parameter	SG2.0RS-S	SG2.5RS-S	SG3.0RS-S
Input (DC)			
Recommended max. PV in- put power	3.0 kWp	3.75 kWp	4.5 kWp
Max. PV input voltage <sup>(2)</sup>		600 V <sup>(1)</sup>	
Min. PV input voltage/ Start-up input voltage		40 V / 50 V	
Rated PV input voltage		360 V	
MPPT operating voltage range <sup>(3)</sup>		40 V – 560 V	
MPP voltage range for rated power	190~480V	235~480V	280~480V
No. of independent MPP inputs		1	
No. of PV strings per MPPT		1	
Max. PV input current		16 A	
Max. DC short-circuit current		20 A	
Max. current for DC con- nector(AU)		30 A	
Output (AC)			
Rated AC output power	2000 W	2500 W	3000 W
Max. AC output power	2000 VA	2500 VA	3000 VA
Rated AC output apparent power(AU)	2000 VA	/	/
Rated AC output current (at 230 V)	8.7 A	10.9 A	13.1 A
Max. AC output current	9.1 A	11.4 A	13.7 A
Rated AC voltage		220 V / 230 V / 240 V	V
AC voltage range		154 V – 276 V	
Rated grid frequency		50 Hz / 60 Hz	
Grid frequency range	45	Hz – 55 Hz / 55 Hz – (	65 Hz

Parameter	SG2.0RS-S	SG2.5RS-S	SG3.0RS-S
Harmonic (THD)	< 3 % (at rated power)		
Power factor at rated power	> 0.99 / 0.8 leading - 0.8 lagging		
/ Adjustable power factor			
Feed-in phases / Connec-			
tion phases	1/1		
Efficiency			
Max. efficiency / European	07.00/ /00.00/	07.0.0/ / 07.0.0/	
efficiency	97.8 % / 96.9 %	97.8 % / 97.2 %	97.8 % / 97.3 %
Protection			
Grid monitoring		Yes	
DC reverse polarity			
protection		Yes	
AC short circuit protection		Yes	
Leakage current protection		Yes	
Surge Protection	[	DC type II / AC type I	I
DC switch		Yes	
PV string current			
monitoring	Yes		
Arc fault circuit interrupter		Ontional	
(AFCI)		Optional	
PID Zero		Yes	
Protective Class			
Overvoltage Category		DC II/AC III	
Active Anti-Islanding		Frequency Shift	
Method General Data			
Dimensions (W x H x D)	320	mm x 225 mm x 120	mm
	520	6 kg	11111
Weight	1	Vall-mounting bracke	.4
Mounting method	v	Ū.	
Topology		Transformerless	
Degree of protection		IP65	
Corrosion(AU)		C5	
Operating ambient temper-		-25°C to +60°C	
ature range			
Allowable relative humidity	0–100 %		
range (non-condensing)			
Max. operating altitude	4000 m		
Cooling method		Natural cooling	
		·	

Parameter	SG2.0RS-S	SG2.5RS-S	SG3.0RS-S	
Display	LED	LED digital display & LED indicator		
Communication	Ethernet / WL	AN / RS485 / DI (Ripp	ole control & DRM)	
DC connection type		MC4 (Max. 6 mm <sup>2</sup>	2)	
AC connection type	Plug a	nd play connector (M	ax. 6 mm²)	
	IEC / EN 62109-	1/2, IEC / EN 62116,	IEC / EN 61727, IEC	
	/ EN 61000-6-2/3, EN 50549- 1, AS/NZS 4777.2:2020,			
Grid compliance	ABNT NBR 1614	49, ABNT NBR 16150	), UNE 217002:2020,	
	NTS V2 TypeA	,CEI 0-21:2020, VDE	0126-1-1/A1(VFR-	
	2019),	UTE C15-712, C10/1	1, G98/G99	
Crid aupport	Active & reac	tive power control and	d power ramp rate	
Grid support	control			
Country of manufacture		China		

(1) The inverter enters standby state when the input voltage ranges between 560 V and 600 V.

(2) Input voltage exceeding the MPPT operating voltage range triggers inverter protection.

(3) Please refer to the user manual for the full load MPPT voltage range.

\* Country code needs to be set before grid connection.

Parameter	SG3.0RS	SG3.6RS	SG4.0RS
Input (DC)			
Recommended max. PV in- put power	4.5 kWp	7.2 kWp for "JO" <sup>(1)</sup> /5.4 kWp for others	7.2 kWp for "JO" <sup>(1)/</sup> 6.0 kWp for others
Max. PV input voltage <sup>(4)</sup>		600 V <sup>(2)</sup>	
Min. operating PV voltage / Start-up input voltage		40 V / 50 V	
Rated PV input voltage		360 V	
MPPT operating voltage range <sup>(5)</sup>		40 V – 560 V	
MPP voltage range for rated power	140~480V	170~480V	190~480V
No. of independent MPP inputs		2	
No. of PV strings per MPPT		1	
Max. PV input current		32 A (16 A / 16 A)	
Max. DC short-circuit current		40 A (20 A / 20 A)	
Max. current for DC con- nector(AU)		30 A	

Parameter	SG3.0RS	SG3.6RS	SG4.0RS
Output (AC)			
		3600W for "JO",	
Rated AC output power	3000 W	3680 W for	4000 W <sup>(3)</sup>
		others	
		3680 VA for	
Max. AC output power	3000 VA	"JO",3680 VA for	4000 VA <sup>(3)</sup>
		others	
Rated AC output apparent power	3000 VA	1	1
Dated AC autout automat (at		15.65 A for	
Rated AC output current (at	13.1 A	"JO","JD"/16 A	17.4 A <sup>(3)</sup>
230 V)		for others	
Max. AC output current	13.7 A	16 A	18.2 A <sup>(3)</sup>
Rated AC voltage		220 V / 230 V / 240 V	/
AC voltage range		154 V – 276 V	
Rated grid frequency /		50 Hz / 60 Hz	
Grid frequency range	45	Hz – 55 Hz / 55 Hz – 6	65 Hz
Harmonic (THD)	< 3 % (at rated power)		
Power factor at rated power			
/ Adjustable power factor	> 0.99 / 0.8 leading - 0.8 lagging		
Feed-in phases / Connec-	1/1		
tion phases	1/1		
Efficiency			
Max. efficiency / European efficiency	97.9 % / 97.0 %	97.9 % / 97.0 %	97.9 % / 97.2 %
Protection			
Grid monitoring		Yes	
DC reverse polarity		Yes	
protection		165	
AC short circuit protection		Yes	
Leakage current protection		Yes	
Surge Protection		DC type II / AC type I	I
DC switch	Yes	Yes	Yes
PV string current			
monitoring		Yes	
Arc fault circuit interrupter			
(AFCI)	Optional		
PID Zero		Yes	
Optimizer compatibility <sup>(6)</sup>		Optional	

Parameter	SG3.0RS	SG3.6RS	SG4.0RS
Protective Class			
Overvoltage Category		DC II/AC III	
Active Anti-Islanding	Frequency Shift		ft
Method			
General Data			
Dimensions (W x H x D)		410 mm x 270 mm x 7	150 mm
Weight		10 kg	
Mounting method		Wall-mounting bra	icket
Topology		Transformerles	S
Degree of protection		IP65	
Operating ambient temper-		-25°C to +60°0	<u>_</u>
ature range		-25 C to +60 C	
Allowable relative humidity	0.400.%		
range (non-condensing)	0–100 %		
Max. operating altitude		4000 m	
Cooling method		Natural cooling	9
Display	LED digital display & LED indicator		D indicator
Communication	Ethernet / V	VLAN / RS485 / DI (Rij	pple control & DRM)
DC connection type		MC4 (Max. 6 mr	n²)
AC connection type	Plu	g and play connector (l	Max. 6 mm²)
	IEC / EN 6210	9-1/2, IEC / EN 62116	, IEC / EN 61727, IEC /
	EN 61000-	6-2/3, EN 50549- 1, A	S/NZS 4777.2:2020,
Grid compliance	ABNT NBR 16149, ABNT NBR 16150, UNE 217002:2020,		
	NTS V2 TypeA,CEI 0-21:2020, VDE 0126-1-1/A1(VFR-		
	2019	9), UTE C15-712, C10/	′11, G98/G99
Crid aupport	Active & re	active power control a	nd power ramp rate
Grid support	control		
Country of manufacture		China	

(1) the system Voc must be less than 560V

(2) The inverter enters standby state when the input voltage ranges between 560 V and 600 V.

(3) SG4.0RS : For Jordan G98, the Max. AC output current is 16A, the Rated and Max. output power is 3680W/3680VA

(4) Input voltage exceeding the MPPT operating voltage range triggers inverter protection.

(5) Please refer to the user manual for the full load MPPT voltage range.

(6) For optimizer compatiblity, please consult Sungrow before placing an oder.

\* Country code needs to be set before grid connection.

Parameter	SG5.0RS	SG6.0RS	
Input (DC)			
Recommended max. PV input	7.5 kWp	9 kWp	
power	7.5 κννρ	9 κννρ	
Max. PV input voltage <sup>(2)</sup>	600 V	′ (1)	
Min. operating PV voltage / Start-up	40 V / 50 V		
input voltage	40 v / 3	50 V	
Rated PV input voltage	360	V	
MPPT operating voltage range <sup>(3)</sup>	40 V – 5	560 V	
MPP voltage range for rated power	235~480V	285~480V	
No. of independent MPP inputs	2		
No. of PV strings per MPPT	1		
Max. PV input current	32 A (16 A	./ 16 A)	
Max. DC short-circuit current	40 A (20 A	(/ 20 A)	
Max. current for DC connector(AU)	30 A	1	
Output (AC)			
Rated AC output power	4999 W for "AU", 5000	6000 W	
	W for others <sup>(4)</sup>		
Max. AC output apparent power	4999 VA for "AU", 5000	6000 VA	
	VA for others <sup>(4)</sup> 4999 VA for "AU", 5000		
Max. AC output apparent power	VA for others	/	
	21.7 A for "AU", 21.8 A		
Rated AC output current (at 230 V)	for others <sup>(5)</sup>	26.1 A	
Max. AC output current	21.7 A for "AU", 22.8 A	27.3 A	
	for others <sup>(5)</sup>	27.5 A	
Rated AC voltage	220 V / 230 V / 240 V		
AC voltage range	154 V – 2	276 V	
Rated grid frequency / Grid fre-	50 Hz / 6	30 Hz	
quency range	0011270	50 112	
Grid frequency range	45 Hz – 55 Hz / 5	55 Hz – 65 Hz	
Harmonic (THD)	< 3 % (at rate	ed power)	
Power factor at rated power / Adjust-	> 0.99 / 0.8 leadir	ng - 0.8 lagging	
able power factor	> 0.99 / 0.8 leading - 0.8 lagging		
Feed-in phases / connection phases	1/1	1	
Efficiency			
Max. efficiency / European	97.9 % / 97.3 %	97.9 % / 97.5 %	
efficiency			

Parameter	SG5.0RS SG6.0RS	
Protection		
Grid monitoring	Yes	
DC reverse polarity protection	Yes	
AC short circuit protection	Yes	
Leakage current protection	Yes	
Surge Protection	DC type II / AC type II	
DC switch	Yes	
PV string current monitoring	Yes	
Arc fault circuit interrupter (AFCI)	Optional	_
PID Zero	Yes	
Optimizer compatibility <sup>(6)</sup>	Optional	
Protective Class		
Overvoltage Category	DC II/AC III	
Active Anti-Islanding Method	Frequency Shift	
General Data		
Dimensions (W x H x D)	410 mm x 270 mm x 150 mm	
Weight	10 kg	
Mounting method	Wall-mounting bracket	
Тороlоду	Transformerless	
Degree of protection	IP65	
Operating ambient temperature	-25°C to +60°C	
range	-23 C 10 + 00 C	
Allowable relative humidity range	0–100 %	
(non-condensing)	0-100 %	
Max. operating altitude	4000 m	
Cooling method	Natural cooling	
Display	LED digital display & LED indicator	
Communication	Ethernet / WLAN / RS485 / DI (Ripple control &	
	DRM)	
DC connection type	MC4 (Max. 6 mm <sup>2</sup> )	
AC connection type	Plug and play connector (Max. 6 mm <sup>2</sup> )	
	IEC / EN62109-1/2, IEC / EN62116, IEC /	
	EN61727, IEC / EN61000-6-2/3, EN50549-1,	
Grid compliance	AS4777.2, ABNT NBR 16149, ABNT NBR 16150	),
Grid compliance	UNE 217002:2020, NTS V2 TypeA, CEI 0-	
	21:2020, VDE0126-1-1/A1 ( VFR-2019 ), UTE	
	C15-712, C10/11, G98/G99	
	, ,	

Parameter	SG5.0RS	SG6.0RS	
Grid support	Active & reactive power control and power ramp		р
		rate control	
Country of manufacture	China		

(1) The inverter enters standby state when the input voltage ranges between 560 V and 600 V.

(2) Input voltage exceeding the MPPT operating voltage range triggers inverter protection.

(3) Please refer to the user manual for the full load MPPT voltage range.

(4) AS 4777.2 4999 W, 4999 VA

(5) AS 4777.2 :Rated and Max. AC current is 21.7 A

(6) For optimizer compatbility, please consult Sungrow before placing an oder

\* Country code needs to be set before grid connection.

## 10.2 Quality Assurance

When product faults occur during the warranty period, SUNGROW will provide free service or replace the product with a new one.

#### Evidence

During the warranty period, the customer shall provide the product purchase invoice and date. In addition, the trademark on the product shall be undamaged and legible. Otherwise, SUNGROW has the right to refuse to honor the quality guarantee.

#### Conditions

- After replacement, unqualified products shall be processed by SUNGROW.
- The customer shall give SUNGROW a reasonable period to repair the faulty device.

#### **Exclusion of Liability**

In the following circumstances, SUNGROW has the right to refuse to honor the quality guarantee:

- The free warranty period for the whole machine/components has expired.
- The device is damaged during transport.
- The device is incorrectly installed, refitted, or used.
- The device operates in harsh conditions beyond those described in this manual.
- The fault or damage is caused by installation, repairs, modification, or disassembly performed by a service provider or personnel not from SUNGROW.
- The fault or damage is caused by the use of non-standard or non-SUNGROW components or software.
- The installation and use range are beyond stipulations of relevant international standards.
- The damage is caused by unexpected natural factors.

For faulty products in any of above cases, if the customer requests maintenance, paid maintenance service may be provided based on the judgment of SUNGROW.



Product data such as product dimensions are subject to change without prior notice. The latest documentation from SUNGROW should take precedence in case of any deviation.

## **10.3 Contact Information**

In case of questions about this product, please contact us. We need the following information to provide you the best assistance:

- Model of the device
- Serial number of the device
- Fault code/name
- Brief description of the problem

For detailed contact information, please visit: https://en.SUNGROWpower.com/contactUS

